



SERVICE MANUAL



KENWOOD®

KT-1000

AM-FM STEREO TUNER

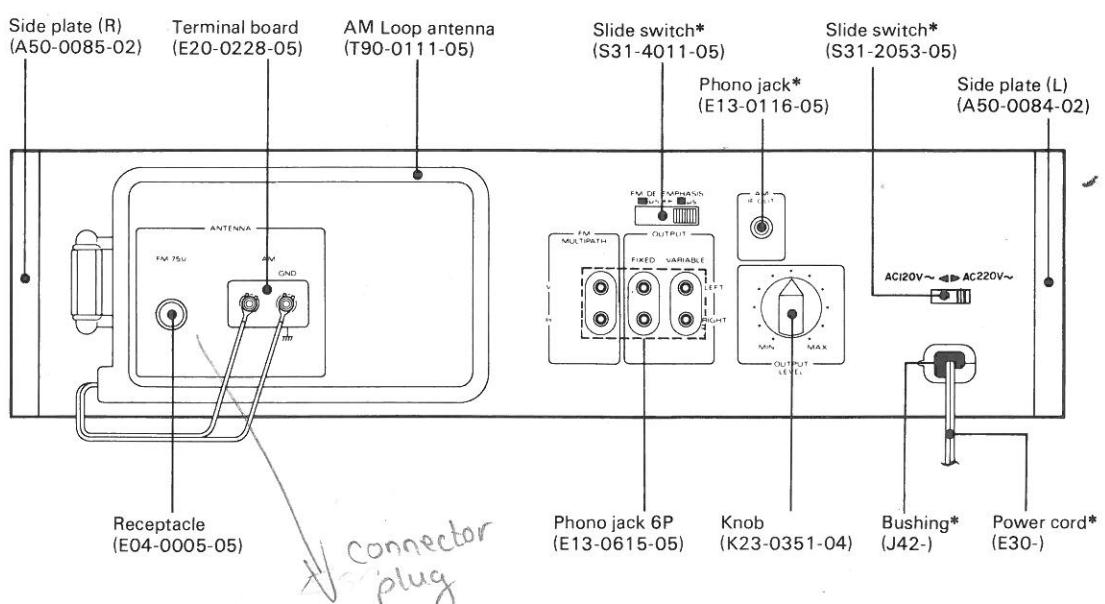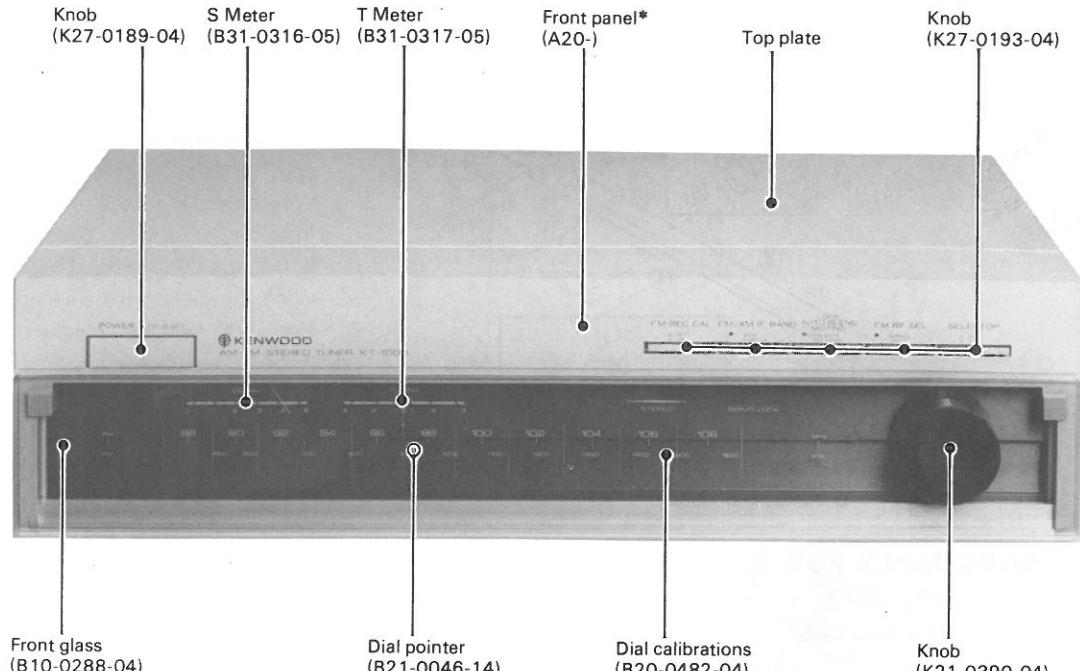


605 - 0127 - 05

* Refer to Parts List.

DIAL CORD STRINGING/DISASSEMBLY FOR REPAIR

DIAL CORD STRINGING

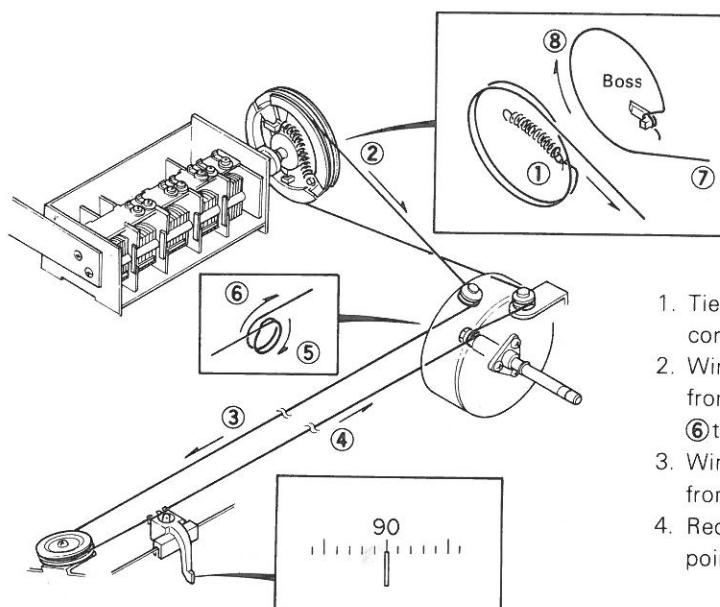


1. Tie the end of the dial cord to the spring. Dress the dial cord in the direction ① through ④
2. Wind the dial cord 2 turns around the dial shaft starting from its upper side. Dress the dial cord in the direction ⑥ through ⑦
3. Wind the dial cord 1 turn around the dial pulley starting from its lower side. Fix the dial cord to the boss. (⑧ ⑨)
4. Receive a 90 MHz signal and then mount the dial pointer at the 90 MHz position of the dial calibrations.

DISASSEMBLY FOR REPAIR

1. Remove the dial cord and the panel.
2. Loosen the screws of the subpanel.
3. Turn the subpanel as illustrated.
4. Now you can remove the parts.


Carefully separate the meters from the subpanel.

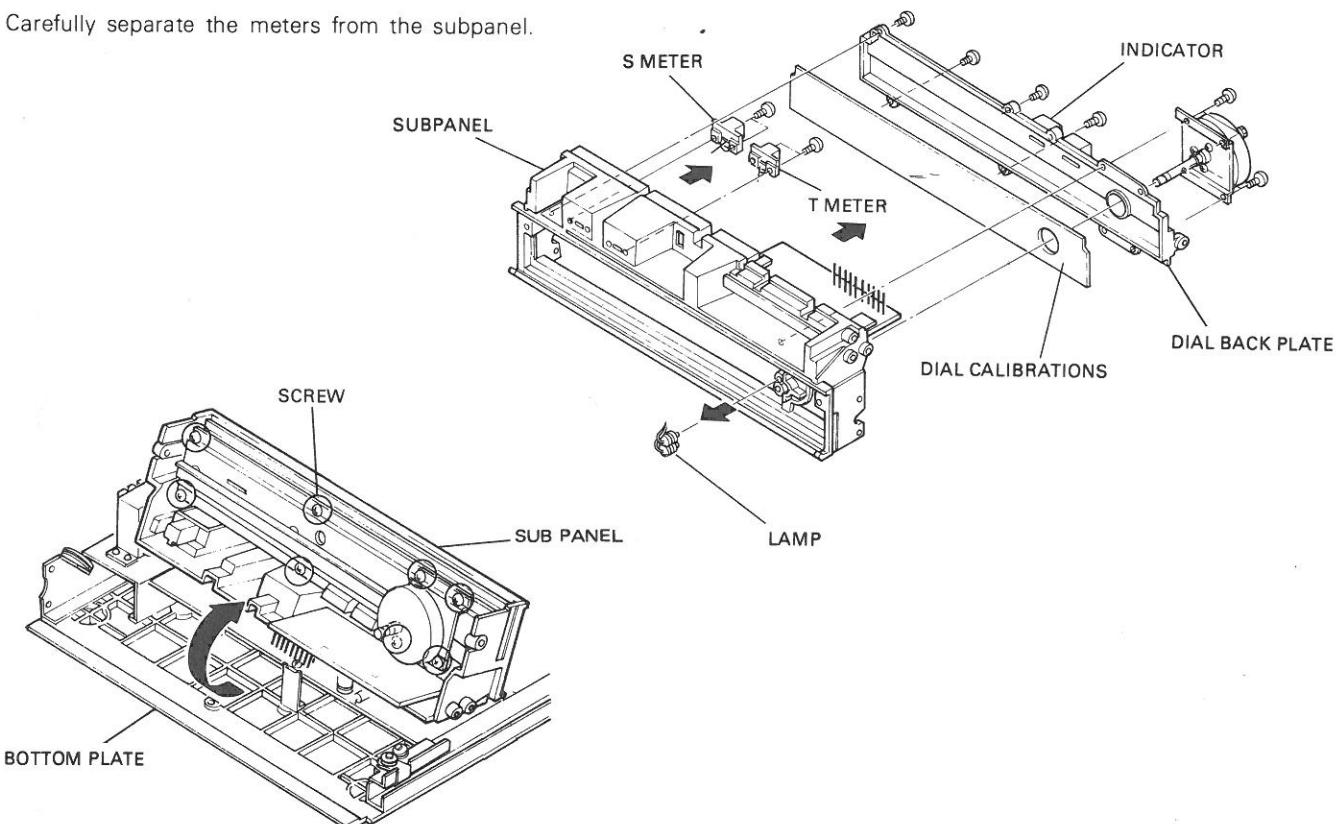

EXPLODED VIEW


A

B

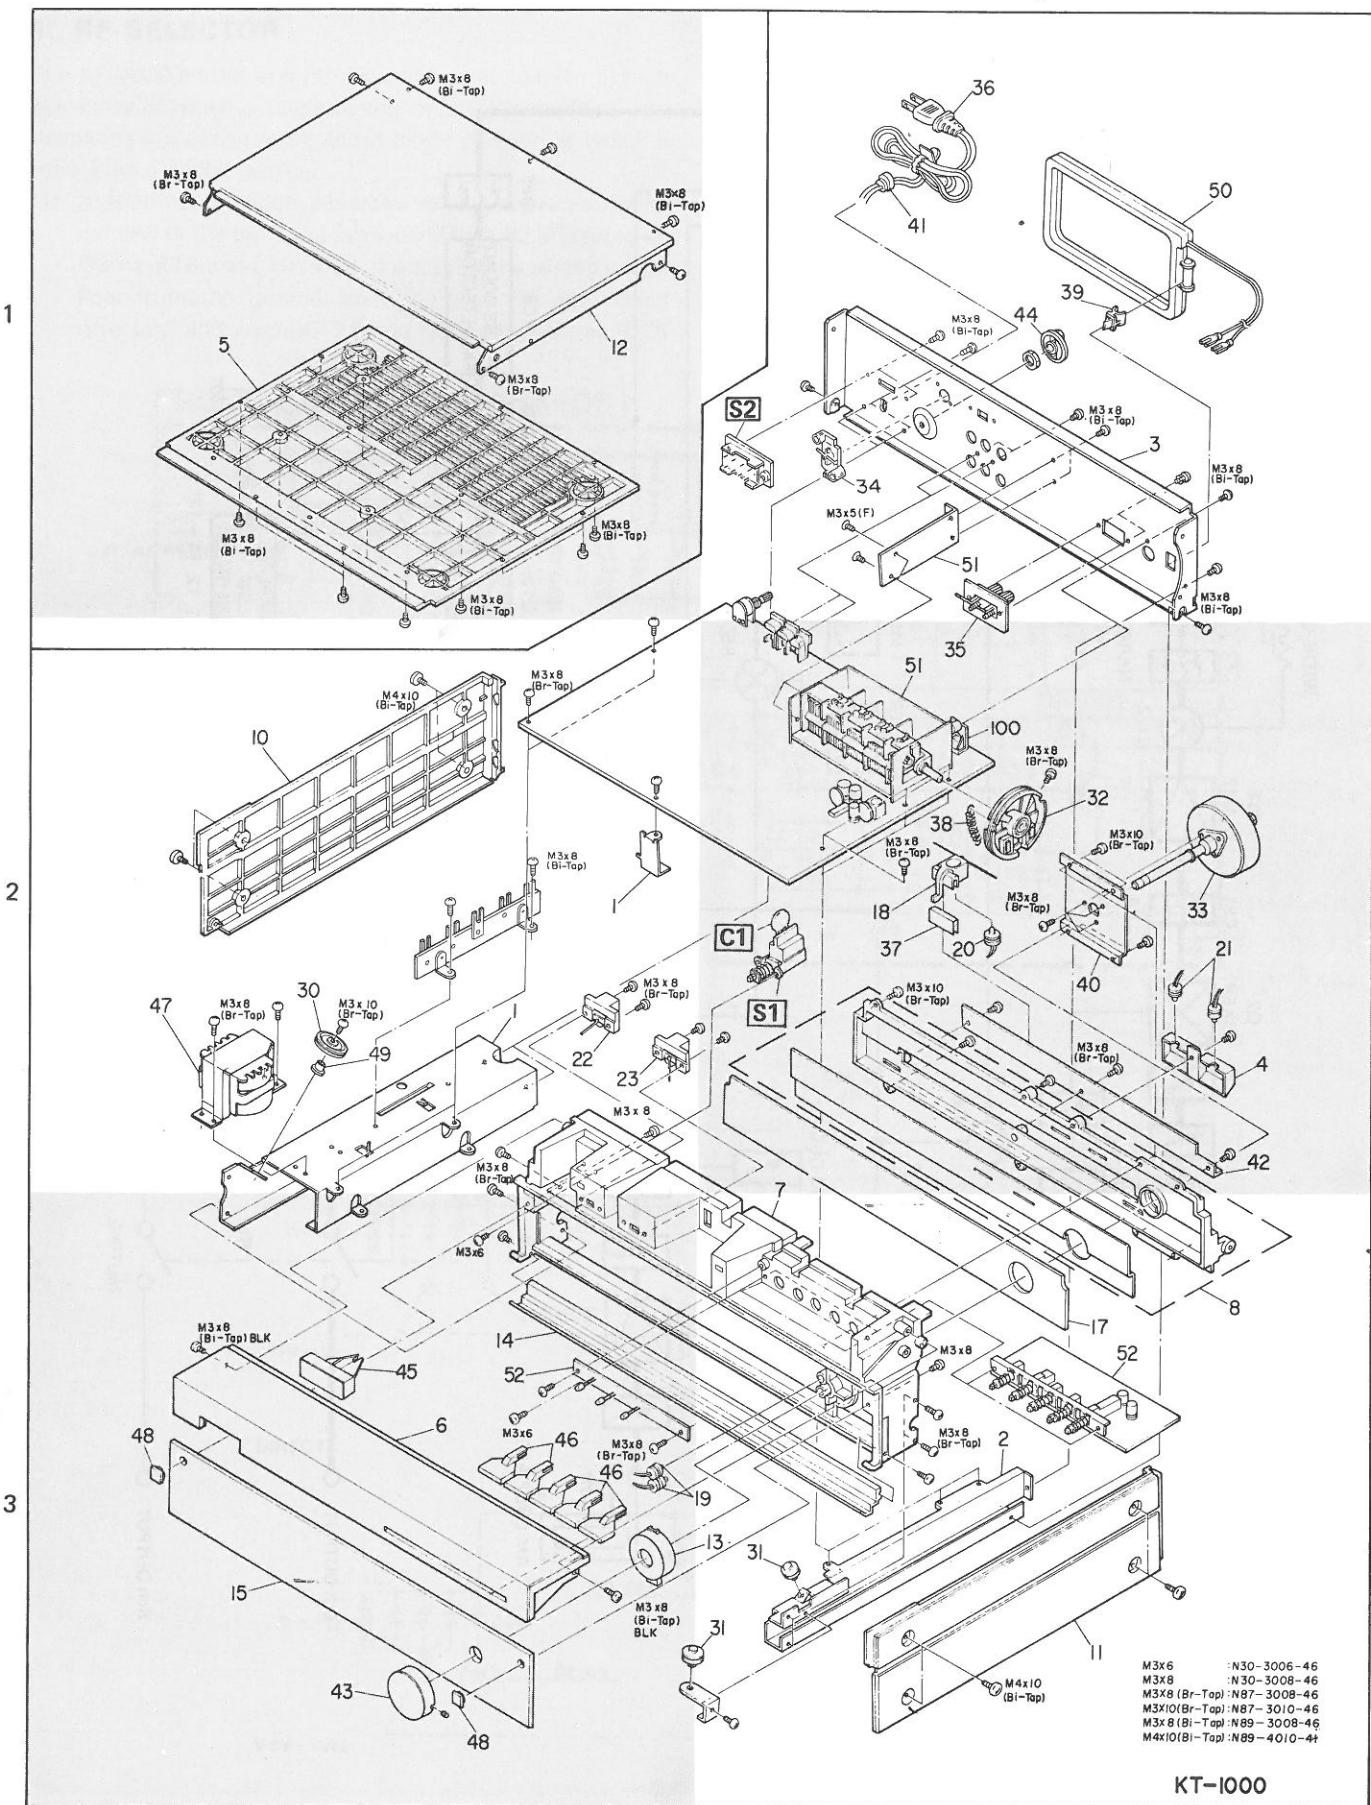

KT-1000

BLOCK DIAGRAM

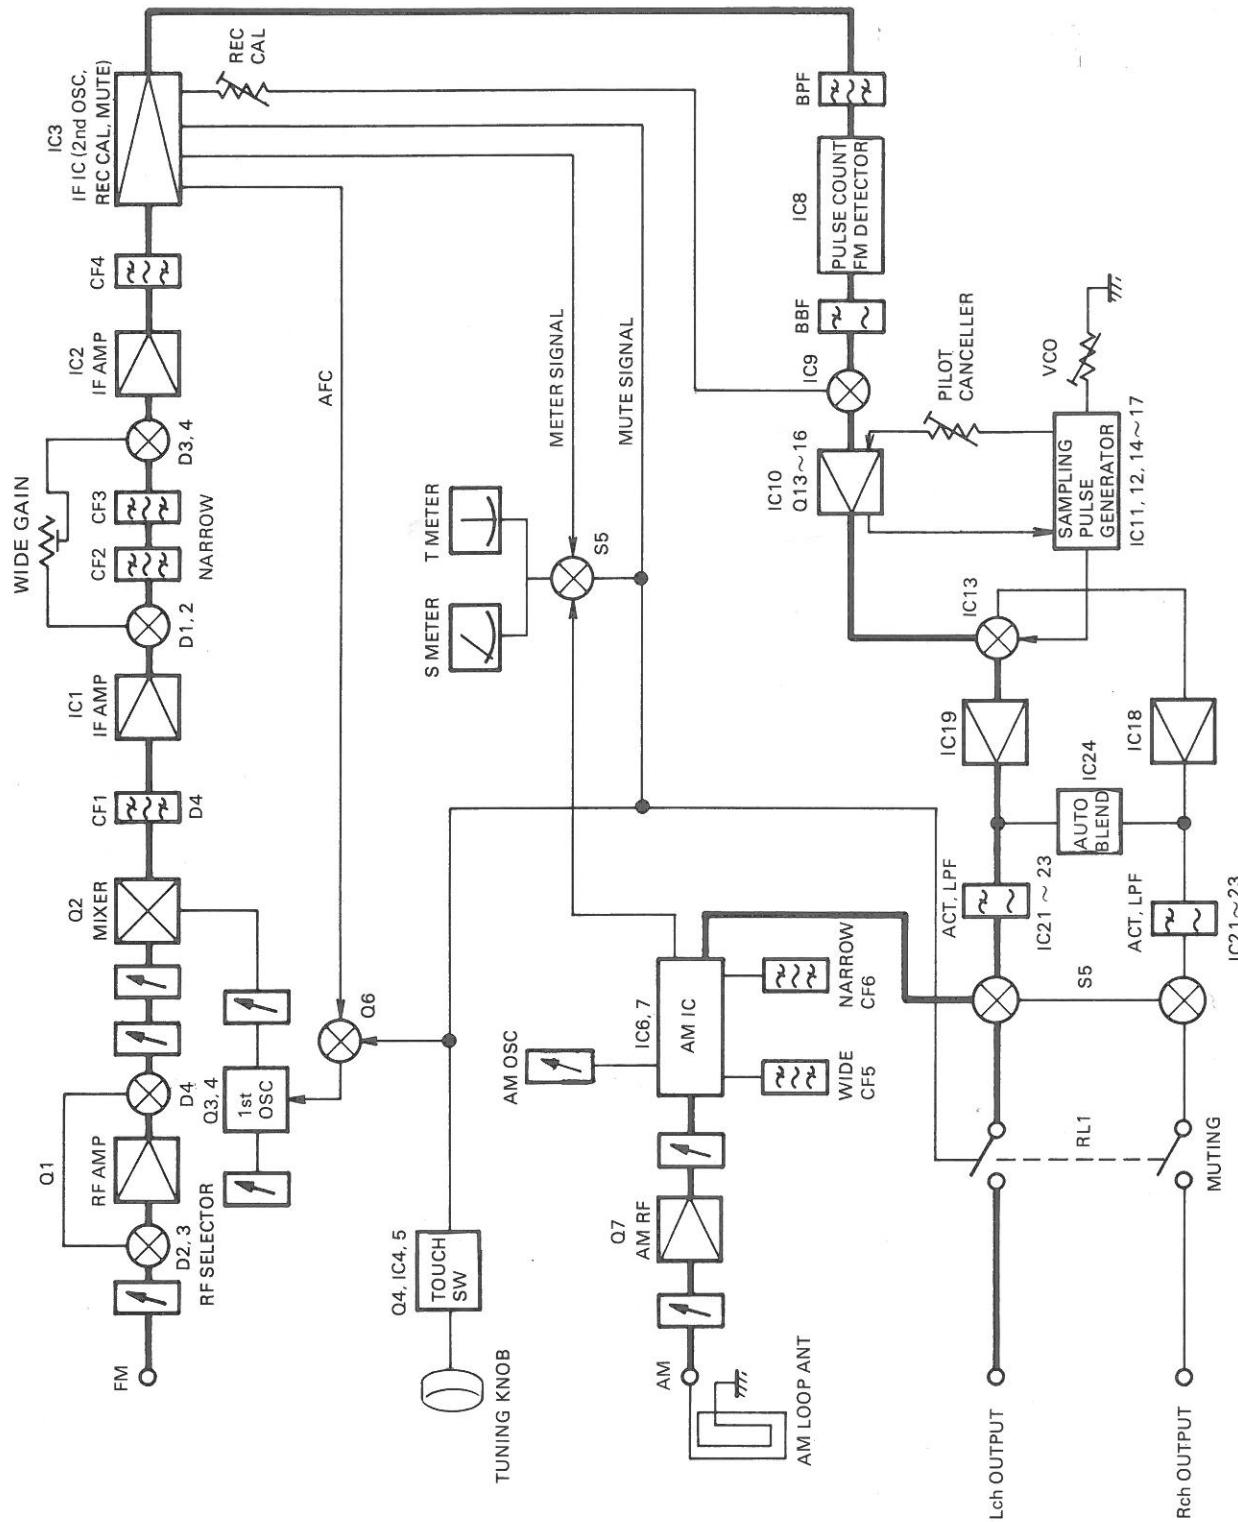

CIRCUIT DESCRIPTION

1. RF SELECTOR

The KT-1000's front end provides a normal position of high sensitivity at which a single-tuning circuit, RF amplifier, and double-tuning circuit work and a direct position at which a triple-tuning circuit works.

- (1) At NORMAL position, a positive voltage applied to terminal Vsw of the front end turns on Q1 via R2 and turns on D3 via R18 and L10. C24 and C27 of the tuning circuit float from the ground since D2 and D4 are biased reversely, and instead C25 and C26 compensate. (C25

and C26 are grounded with D3 on.) L8 ~ L10 do not comprise a tuning circuit but simply work as choke coils.

- (2) At DIRECT position, a negative voltage applied to terminal Vsw cuts off Q1 and D3 goes off. An input signal coming from antenna enters the first tuning circuit and, via C25 and C26, goes to the second and third and finally comes to the mixer, bypassing the RF amplifier. Because D2 and D4 are on in DIRECT position and C24 and C27 respectively make up the first and second tuning circuits.

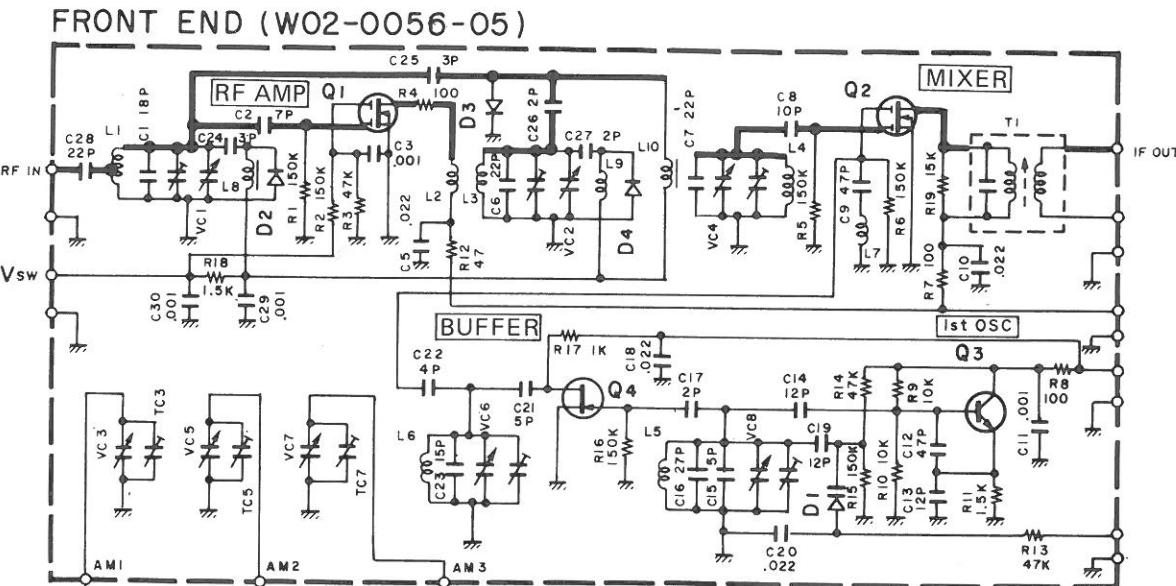


Fig. 1-1

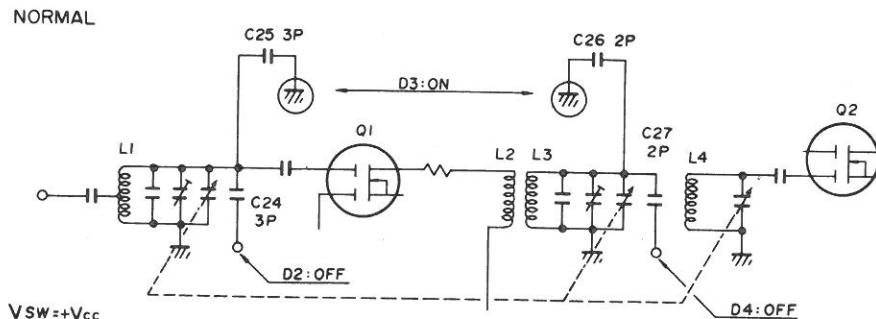


Fig. 1-2

NORMAL

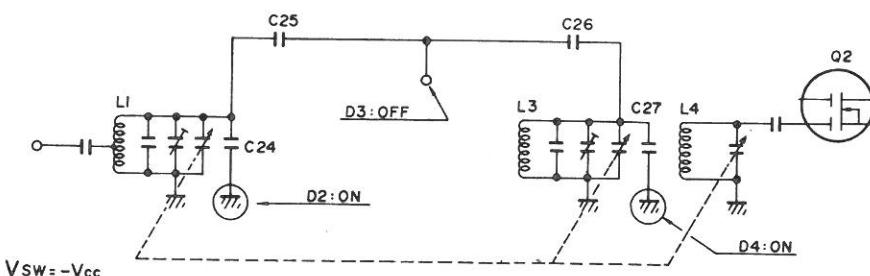


Fig. 1-3

DIRECT

CIRCUIT DESCRIPTION

2. SAMPLING PULSE GENERATOR

A sampling pulse generator which makes use of C-MOS devices is described here. For the pilot canceller, MPX, and emphasis selector, refer to KT-917 service manual.

IC14 (2-input OR gates) outputs a sampling pulse or "H" to switch over stereo and monaural modes. At the monaural mode, the output is always "H" since pin 5, an input pin (Q20's collector) of the OR gate, is "H". At the stereo mode, Q20 outputs "L" and the OR gate outputs "H" only when pin 6 of the OR is "H". Thus the output waveform is the same as the sampling pulse.

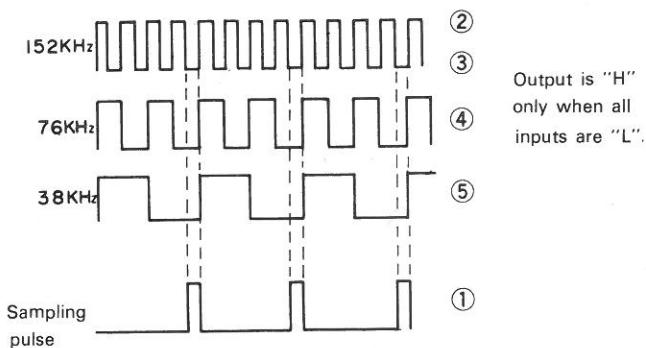


Fig. 2-1

IC15 and IC16 (4-input NOR gates) outputs NOR pulses of 152 kHz, 76 kHz, and 38 kHz. Figure 2-1 is the timing diagram of IC15. An output pulse appears just before the rise of the 38-kHz square wave. The other NOR gate contained in IC15 receives the inverted waveform of the 38-kHz square wave and outputs a pulse waveform which is out of phase by $\pi/2$. (See Figure 2-2.) IC16 as well as IC15 receives 38-kHz square waves and inverted 76-kHz square wave and outputs pulses shifted by $\pi/4$ and $3/4\pi$. The outputs of IC16 are used as sampling pulses of the L and R channels. The outputs of IC15 are used as sampling pulses for cancelling SCA beating.

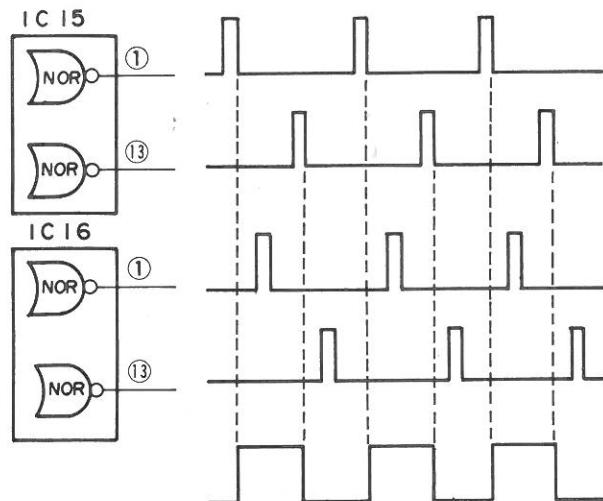


Fig. 2-2 L-channel switching 38-kHz pulse and sampling pulses.

IC17 (D F-F) divides a 152-kHz pulse coming from IC12 into a 76-kHz pulse. Part of the output is routed to the PLL via a differentiator.

IC12 (VCO) oscillates at 304-kHz and outputs a square wave of 152-kHz which is supplied to IC15 ~ IC17 via buffer Q23.

IC11 (PLL) which makes up a PLL along with IC12 and IC17 generates the pilot cancelling pulse and 38-kHz square wave.

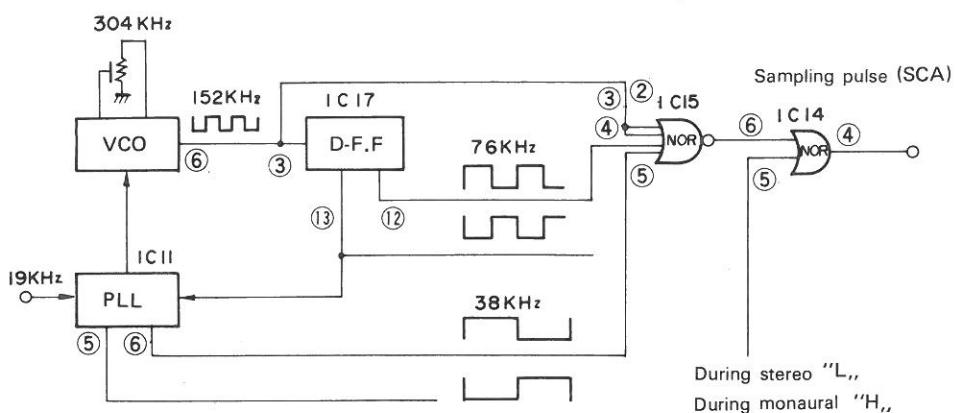


Fig. 2-3

CIRCUIT DESCRIPTION

3. TOUCH SENSOR SERVO LOCK

When the tuning knob is touched, AFC is released and an extra-low frequency range is cut off for easy tuning. When the tuning knob is touched, the oscillator consisting of Q4, L7, and C40 (Which is directly connected to L7) stops oscillation.

When the knob is not touched, the oscillator's output rectified by D9 appears as a positive voltage at the cathode and enters IC4 through pin 3 (non-inverting input of an operational amplifier). A voltage of approximately +8V appears at pin 1 of IC4 and, inverted by Q32, turns off Q6.

When the knob is touched, only the current supplied through R40 flows through D9 and its anode becomes positive and cathode negative. IC4 inverts the input and

generates approximately -8V. Q32 inverts the output to turn on Q6 and short the AFC signal. On the other hand, the output of IC5 which is connected to the output of IC4 via D42 also becomes approximately -8V. This voltage turns off CMOS-SW of IC9 to cut extra-low frequencies of FM demodulated signals. The initial condition will be restored as soon as one releases the knob. But CMOS-SW turns on after completion of the servo lock operation by giving a time constant to the input circuit of IC5. CMOS-SW is normally turned on to cut off extra-low frequency components, which would appear when an FM receiver is tuned in or out and would be heard as a popping noise. In the normal state (CMOS-SW ON) extends frequency response to the extra-low frequency range.

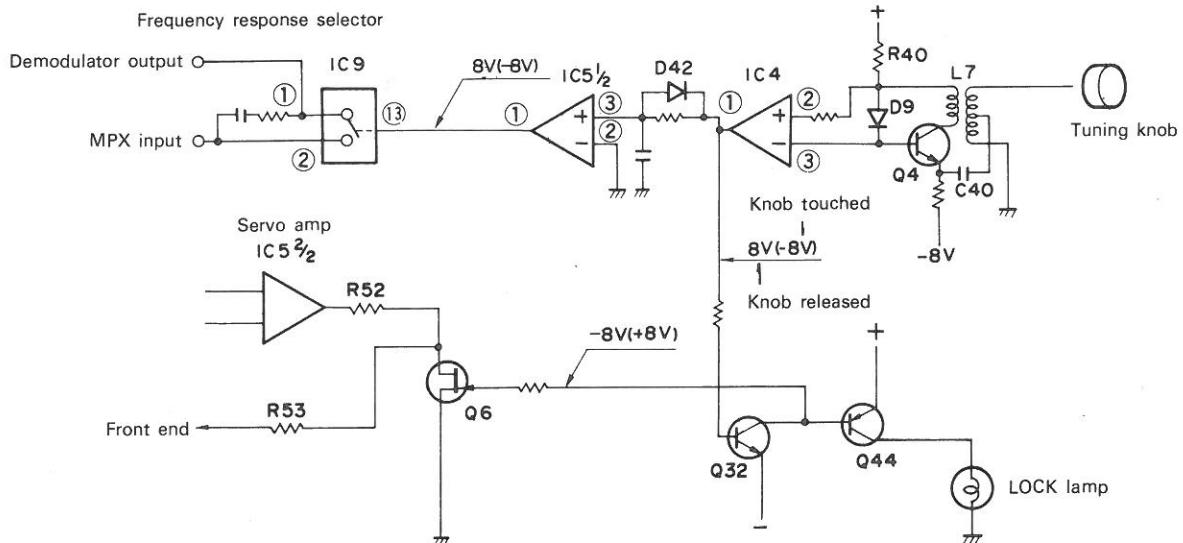


Fig. 3 Touch sensor servo lock

ADJUSTMENT

Set the MODE switch to AUTO/MUTING, IF BAND switch WIDE and RF SELECTOR switch NORMAL, REC CAL switch OFF, unless otherwise specified.

NO.	ITEM	SYSTEM CONNECTIONS	TEST EQUIPMENT SETTING	TUNER (RECEIVER) SETTING	ALIGNMENT POINTS	ALIGN FOR	FIG. NO.
FM SECTION							
1	T METER (1)	(A) *1	95 MHz 1 kHz, 75 kHz dev	95 MHz MODE: MONO IF BAND: NARROW	—	*2	
2	T METER (2)	ditto	95 MHz 1 kHz, 75 kHz dev 60 dB *3	95 MHz MODE: MONO	L4	T meter pointer to be at the center.	
3	S METER	ditto	95 MHz 1 kHz, 40 kHz dev 60 dB *3	95 MHz	VR1 (X13-2960)	*4	
4	WIDE GAIN	ditto	95 MHz 1 kHz, 40 kHz dev	95 MHz IF BAND: NARROW MODE: MONO	—	*5	
5	WIDE GAIN	ditto	*6	95 MHz IF BAND: WIDE MODE: MONO	VR1	S meter deflection: Same as NARROW.	
6	REC CAL	(B)	—	REC CAL: ON	VR2	0.38V	⑯
7	DISTORTION (STEREO)	(C)/(B)	95 MHz 1 kHz, 68.25 kHz dev *7 60 dB *3 Selector: L or R	95 MHz	T1 (Front end)	Minimum distortion	
8	PILOT CANCELLER	(C)/SCOPE to the connecting point of R151 and R152.	95 MHz Pilot signal 60 dB *3	ditto	VR11, L17	Minimum output	⑤ ⑬
9	VCO	(C)/Frequency counter to the connecting point of R162 and Q17 via SSVM. *8	95 MHz 0 (dev) 60 dB *3	ditto	VR10	76 kHz	
10	SCA (L)	(C)/(B)	95 MHz 67 kHz, 7.5 kHz dev Selector: L + R 60 dB (ANT input)	95 MHz	VR8	Minimum output	
11	SCA (R)	ditto	ditto	ditto	VR9	Minimum output	
AM SECTION							
(1)	RF ALIGNMENT (AM)	(D)/(B)	600 kHz 400 Hz, 30% mod	AM 600 kHz	L11, 12, 13	Maximum amplitude and symmetry of the oscilloscope display.	
(2)	RF ALIGNMENT (AM)	(D)/(B)	1400 kHz 400 Hz, 30% mod	AM 1400 kHz	TC3, 5, 7	Maximum amplitude and symmetry of the oscilloscope display.	
Repeat alignments (1) and (2) several times.							
(3)	S METER	(D)/(B)	1400 kHz 60 dB (ANT input)	1400 kHz	VR3	*4	
(4)	T METER	ditto	ditto	ditto	VR4	T meter pointer to be on the center line.	


ADJUSTMENT

Note: Separation has been adjusted using accurate measuring instruments. Since an ordinary MPX-SG does not have sufficient phase accuracy (especially at 10 kHz), do not use one for separation adjustment. It is not recommended that separation is adjusted in servicing. For reference, separation adjustment procedures are shown in the following.

NO.	ITEM	SYSTEM CONNECTIONS	TEST EQUIPMENT SETTING	TUNER (RECEIVER) SETTING	ALIGNMENT POINTS	ALIGN FOR	FIG. NO.
①	SUB	(C)/(B)	95 MHz 1 kHz, 68.25 kHz Dev *7 60 dB *3 Selector: L—R	95 MHz	L16	Maxmum output	⑯ ⑮
②	SEPARATION (1)	ditto	95 MHz 1 kHz, 68.25 kHz Dev *7 60 dB *3 Selector: L	95 MHz IF BAND: WIDE	VR5 (L → R)	Minimum crosstalk from the other channel.	
③	SEPARATION (2)	ditto	95 MHz 1 kHz, 68.25 kHz Dev *7 60 dB *3 Selector: R	ditto	VR6 (R → L)	ditto	
④	SEPARATION (3)	ditto	95 MHz 10 kHz, 68.25 kHz Dev *7 60 dB *3 Selector: L or R	ditto	L9	ditto *9	

Repeat alignments “① ~ ④” several times.

⑤	SEPARATION (4)	(C)/(B)	95 MHz 1 kHz, 68.25 kHz Dev *7 60 dB *3 Selector: L or R	95 MHz IF BAND: NARROW	VR7	Minimum crosstalk from the other channel.	
⑥	AUTO BLEND	ditto	95 MHz 1 kHz, 68.25 kHz Dev *7 26 dB *3 Selector: L or R	ditto	VR2 (X13-2960)	Middle crosstalk from the other channel	⑫ ⑯

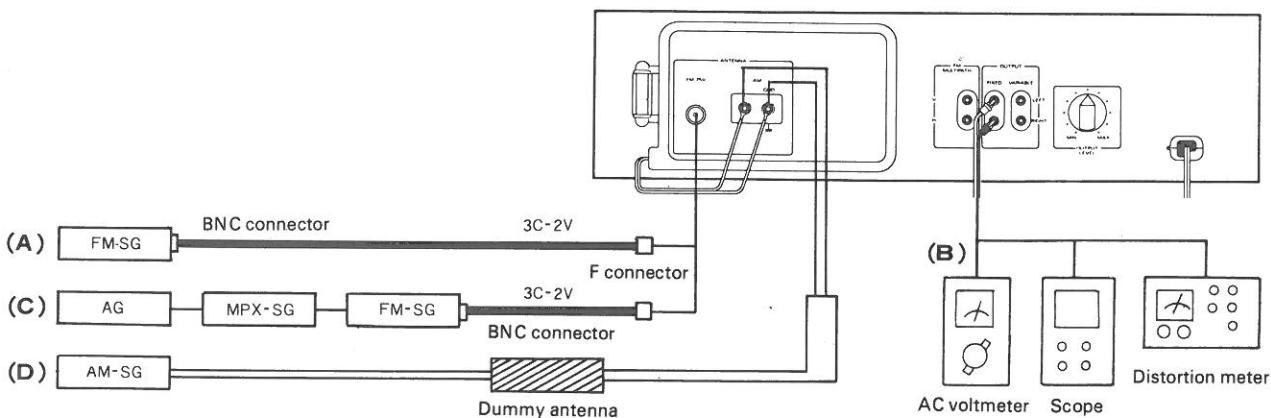


ADJUSTMENT


TEST INSTRUMENTS

Oscilloscope	SCOPE
AM signal generator	AM-SG
FM signal generator	FM-SG
Audio frequency generator	AG
AC voltmeter	
FM multiplex generator	FM-MPX
Frequency counter	
DC voltmeter	
Distortion meter	
Dummy antenna	

*8

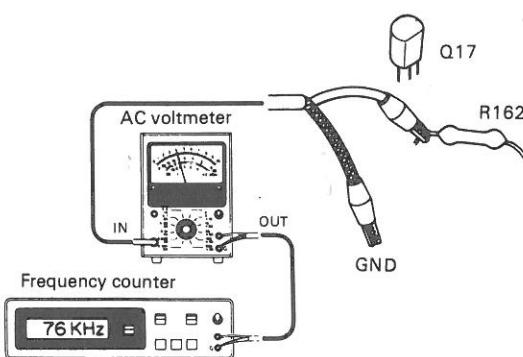


- *1. To perform precise adjustment, a SG (with 75Ω output impedance) must be directly connected to the tuner. Use a connecting cable with a BNC connector at the SG end and an F connector at the tuner end. When an open-scaled SG (which indicates the output level when no load is connected) is used, subtract 6 dB from the SG reading to obtain ANT input level. If the output impedance of the SG is 50Ω , use a new IHF standard $50\Omega:75\Omega$ dummy antenna.

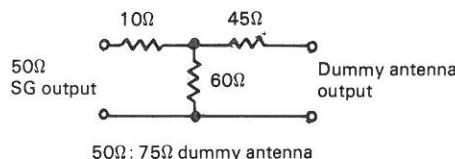

If an open-scaled SG is used, subtract 12 dB from the SG reading to obtain ANT input level. If a load-scaled SG (which indicates the output level when a 50Ω load is connected) is used, subtract 6 dB from the SG reading.


- *2. Adjust the tuning knob so that the same amount of noise is observed at the top and bottom of the output waveform with a weak signal.

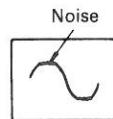

- *3. Tuner input level.
- *4. S-meter deflection: 4.8 scale graduations.
- *5. TUNER input to achieve a S-meter deflection of 3 scale graduations.
- *6. TUNER input obtained at Step 4.
- *7. Set deviation to ± 68.25 kHz with selector in L + R position.
Set deviation of pilot signal to 6.75 kHz (9%).

TUNER (X05-1910) Component side view
SWITCH (X13-2960) Component side view

Refer to the schematic diagram for the values of resistors and capacitors.

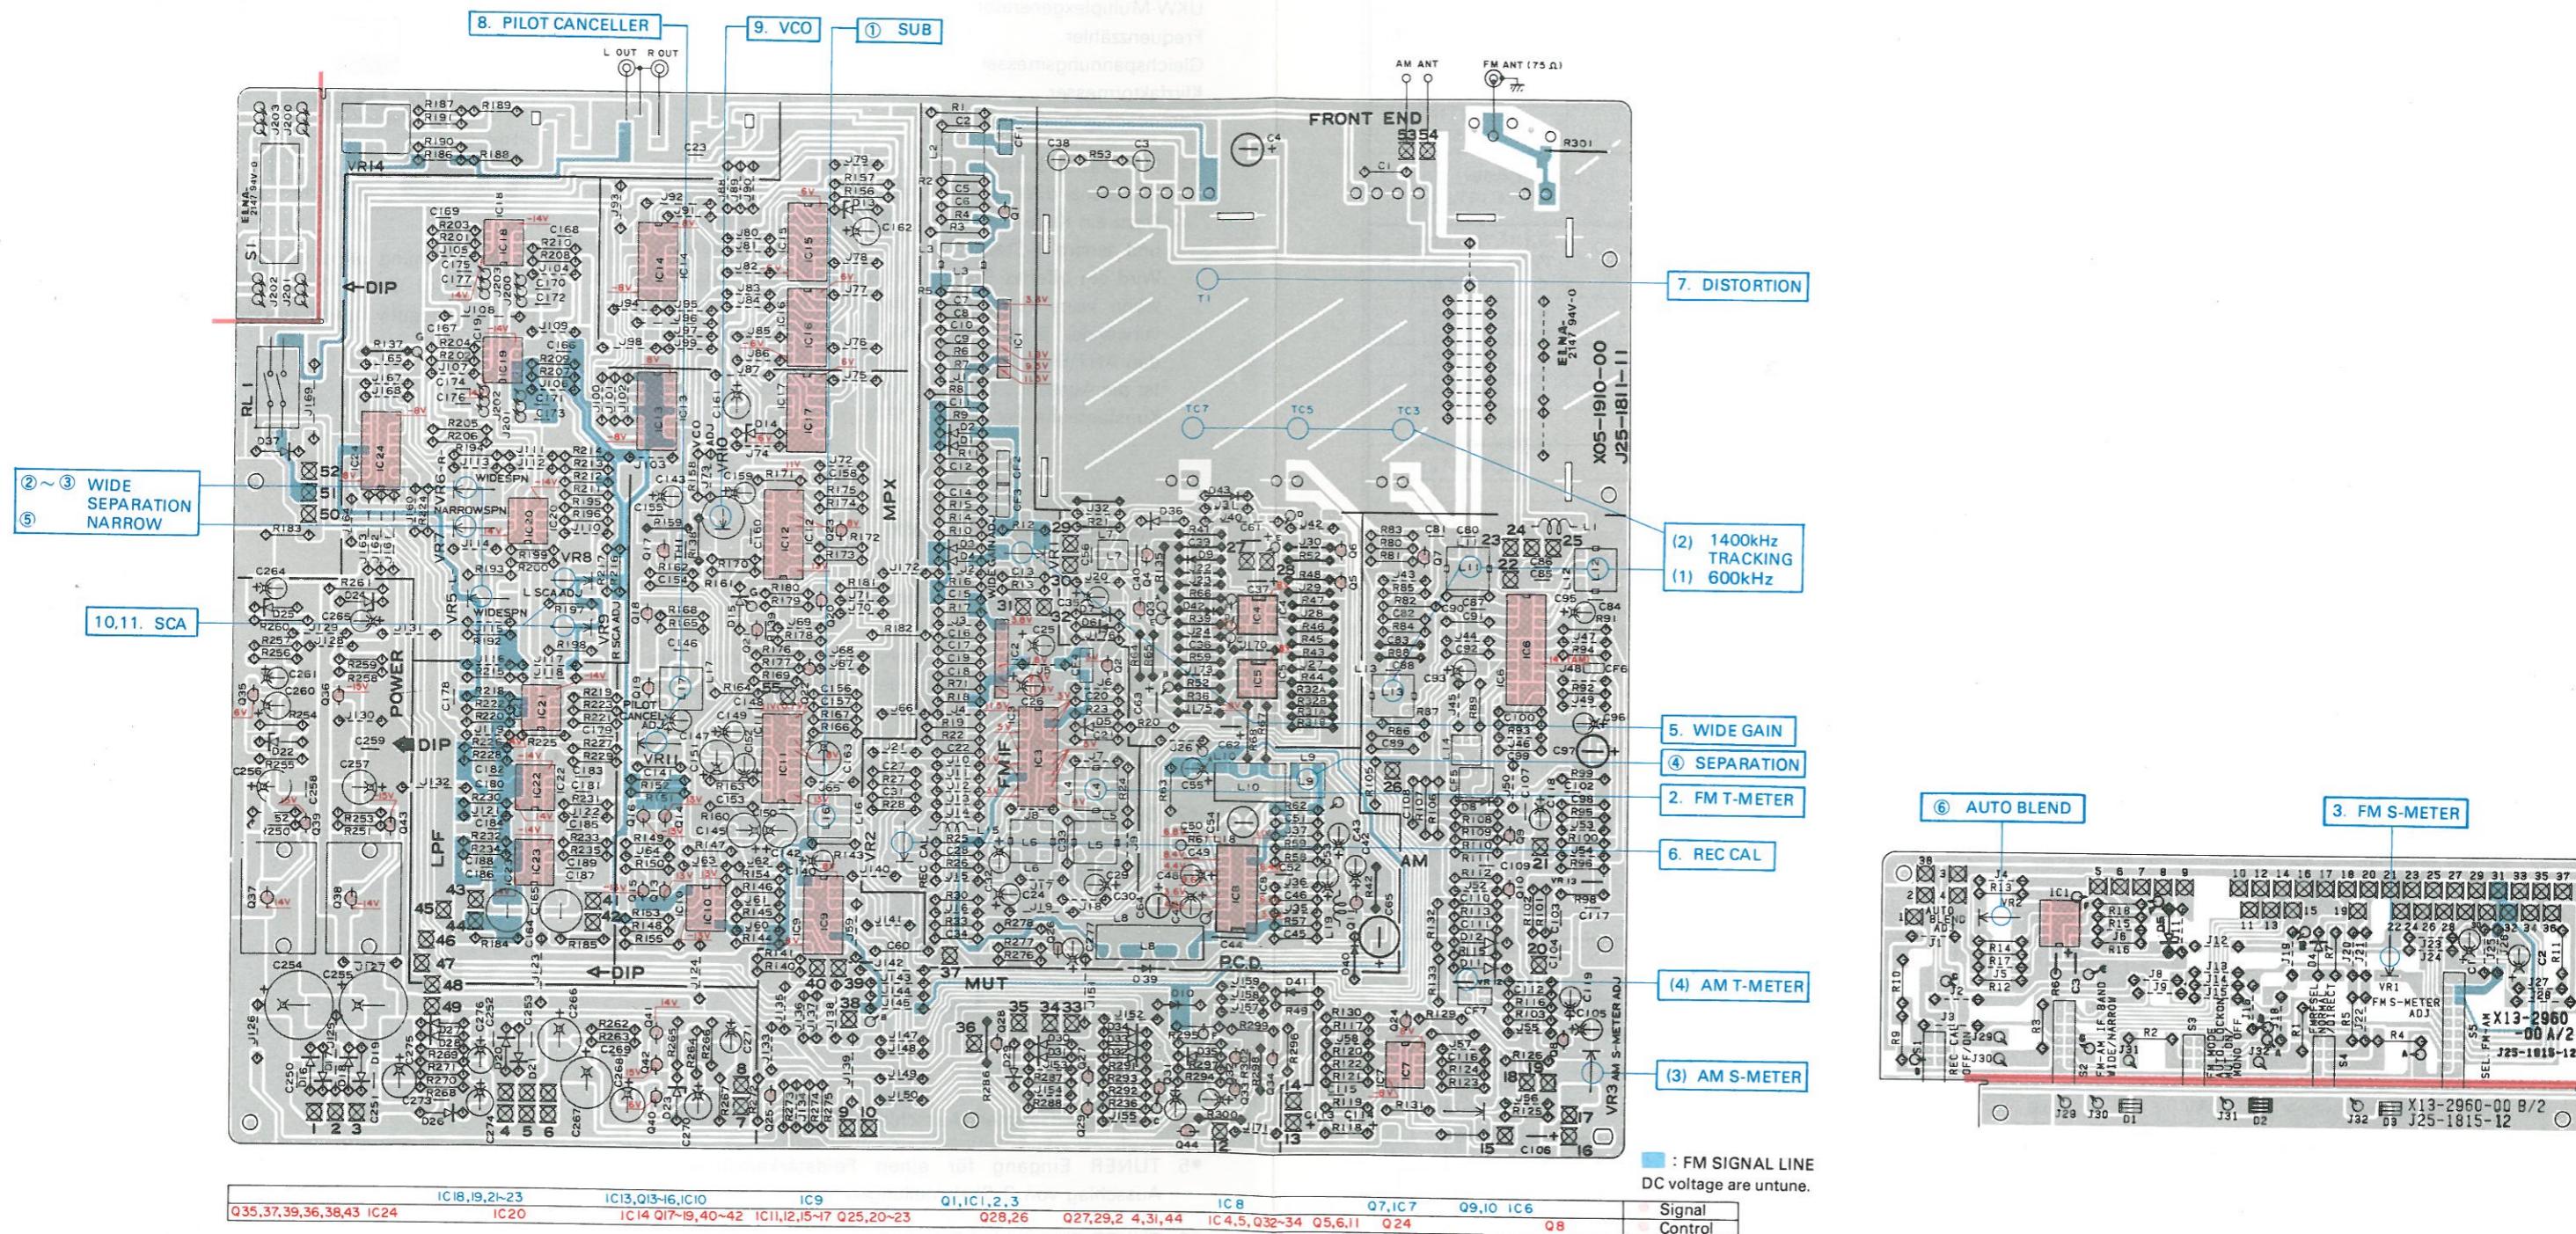

WAVEFORMS AT CHECK POINTS



① ~ ④	FM 95 MHz	0 (Dev) 60 dB (ANT input)
⑤ ~ ⑯	FM 95 MHz	1.9 kHz (Mod) 68.25 kHz (Dev) 60 dB (ANT input)
⑰	FM 95 MHz	1.9 kHz (Mod) 68.25 kHz (Dev) 26 dB (ANT input)
①	2μS .5V TOUCH SENSOR	
⑩	10μS 5V 38 kHz PULSE	
⑦	10μS 10V	
②	2μS .2V 1st IF	
③	.2μS .2V 2nd IF	
⑳	2μS .2V 2nd IF	
④	.2μS .2V M.M.V	
⑤	.1mS .5V FM DETECTOR	
⑥	.1mS 2V SAMPLING HOLD WAVE	
⑦	20μS 1V	
⑧	20μS 10V SAMPLING PULSE (L)	
⑨	10μS 5V 152kHz PULSE	
⑩	10μS 10V	
⑪	10μS 5V 76 kHz PULSE	
⑫	10μS 10V	
⑬	.1mS .5V	
⑭	.1mS 1V	
⑮	5μS .5V SUB WAVE	
⑯	5μS 10V PULSE (SCA)	
⑰	.2mS 1V REC CAL OUTPUT SIGNAL	
⑱	.1mS 1V AF OUT AT AUTO BLEND (L)	
⑲	.1mS 1V AF OUT AT AUTO BLEND (R)	


SUBSTITUTION LIST	
Semiconductor Used	Substitutions
T C4066BP	μPD4066C
MB84002B	TC4002BP, μPD4002C
MB84071B	TC4071BP, μPD4071C
MB84013B	TC4013BP, μPD4013C
μPC4557C	NJM4558D, AN6552
2SC828A	2SC945, 2SC1685
2SA733(A)	2SA56A, 2SA112NC
2SA850	2SA777 *
2SC1735	2SC1509 *
2SB514	2SB434
2SD330	2SD234
2SK105(H, J)	2SK68(M, N)
IS1555	IS2076
XZ-060	WZ-060
XZ-090	WZ-090

* CAUTION:

When using the substitution, make sure the transistor leads are inserted in the correct position.

KENWOOD®

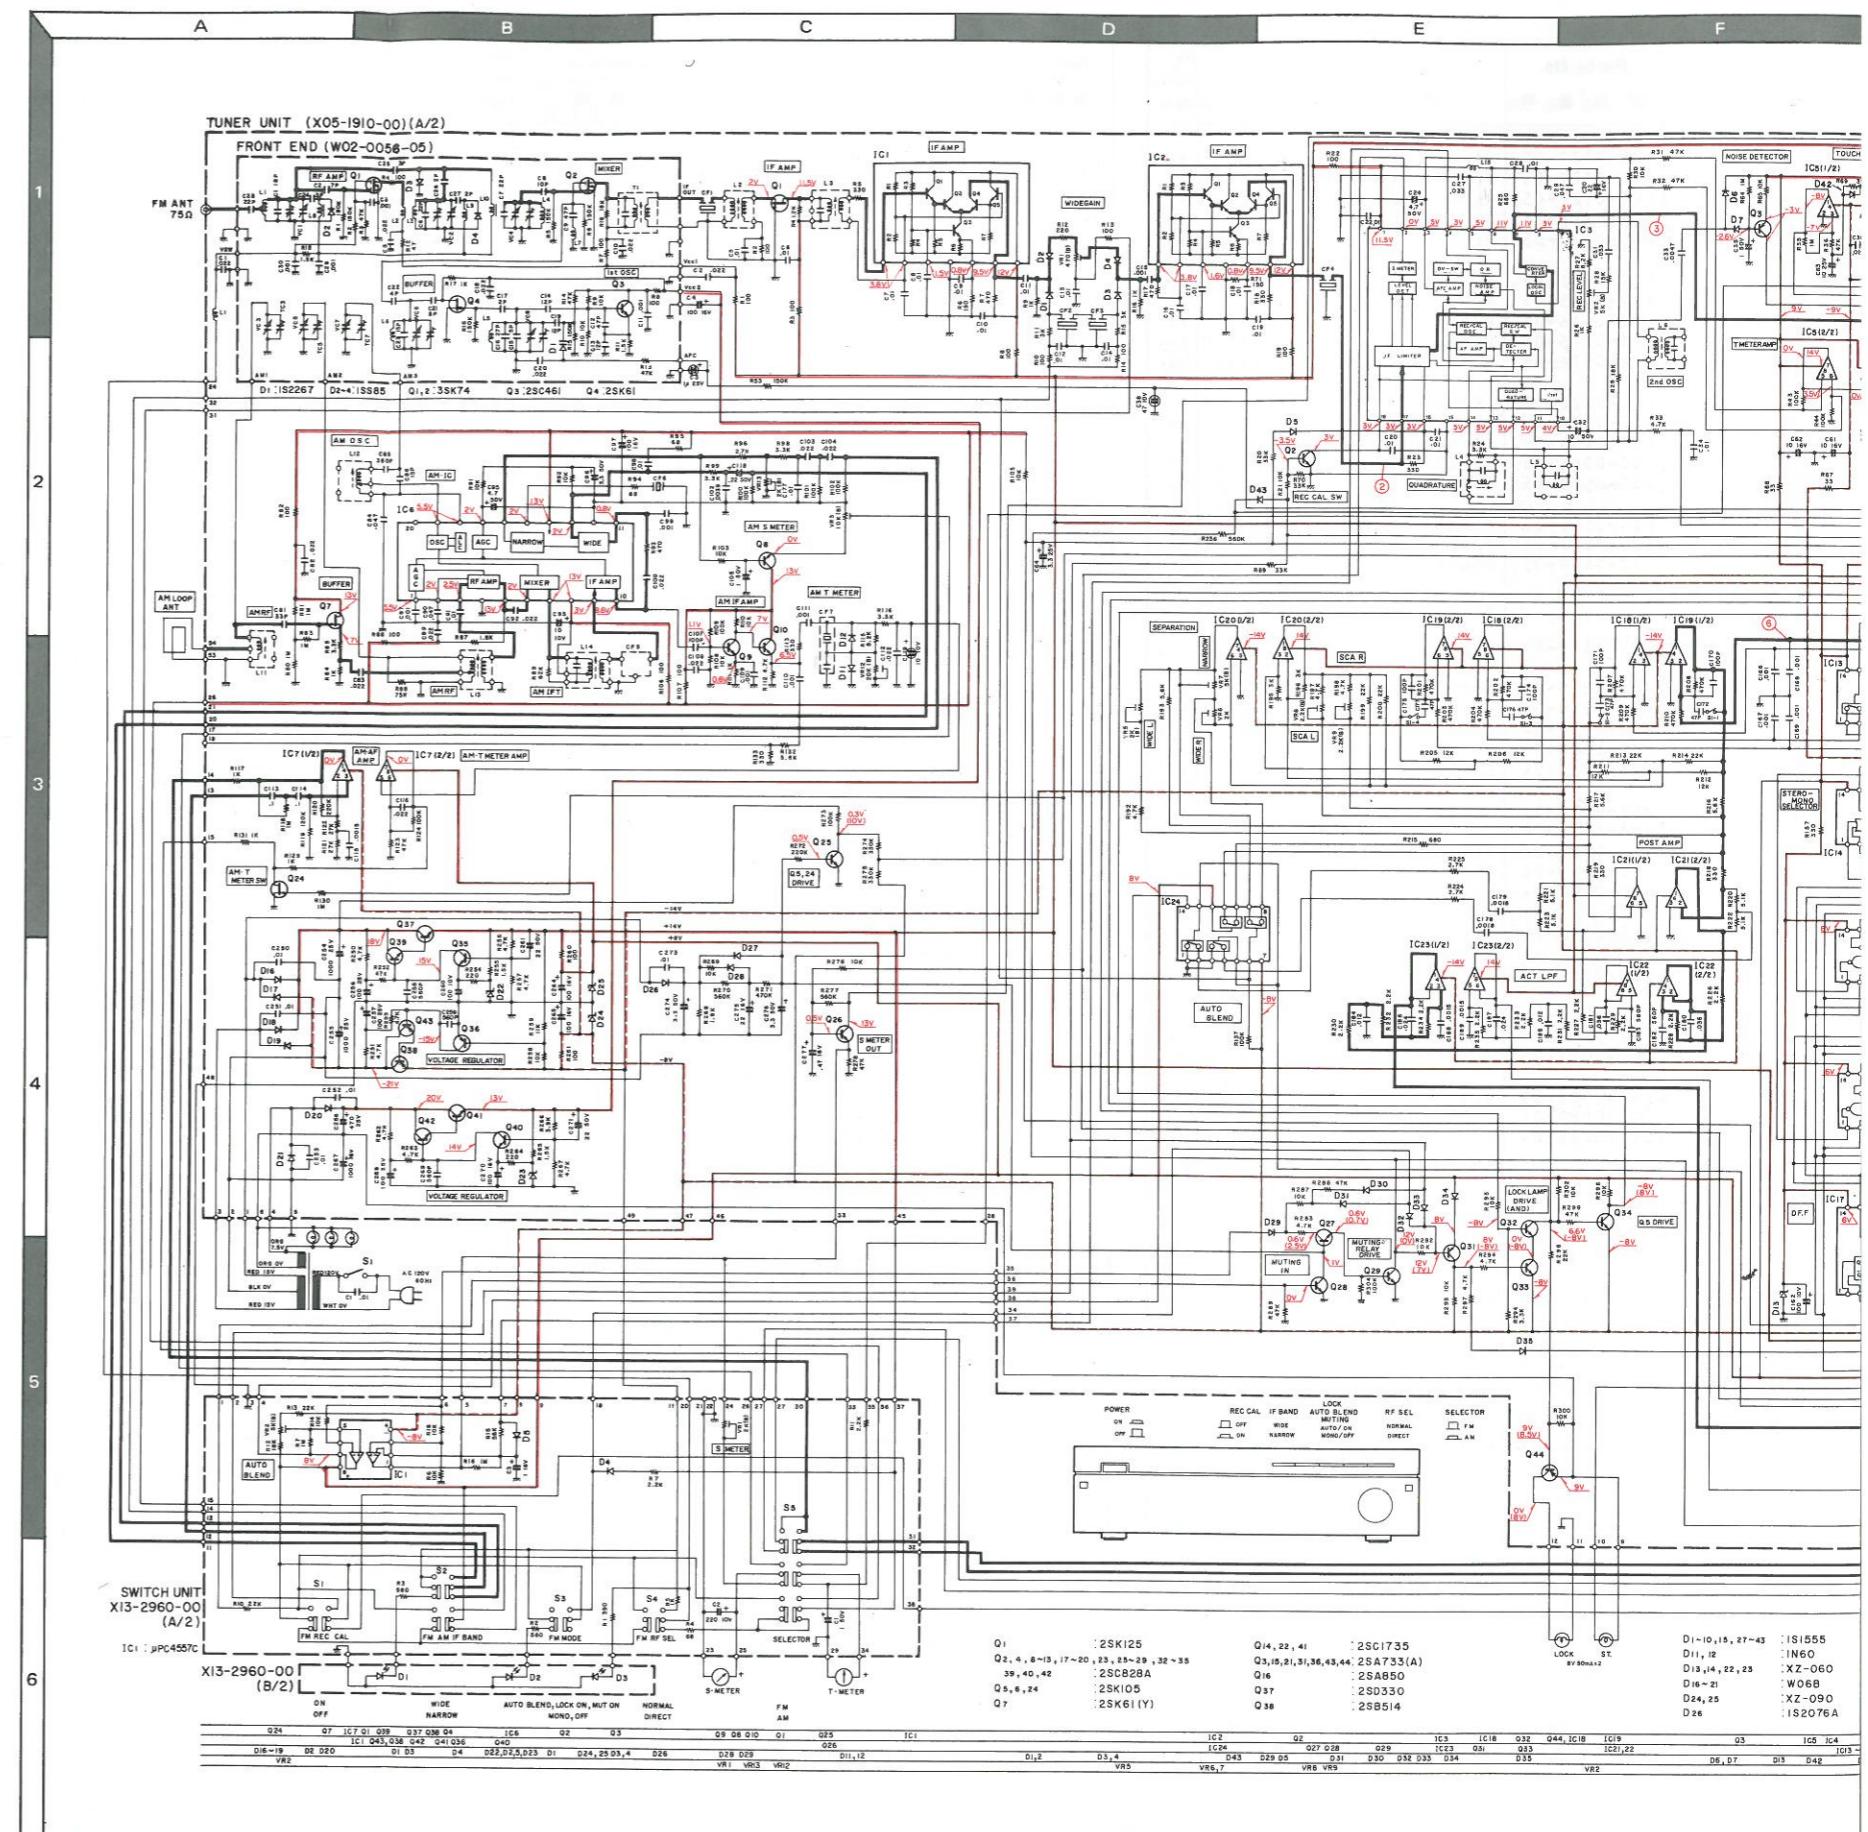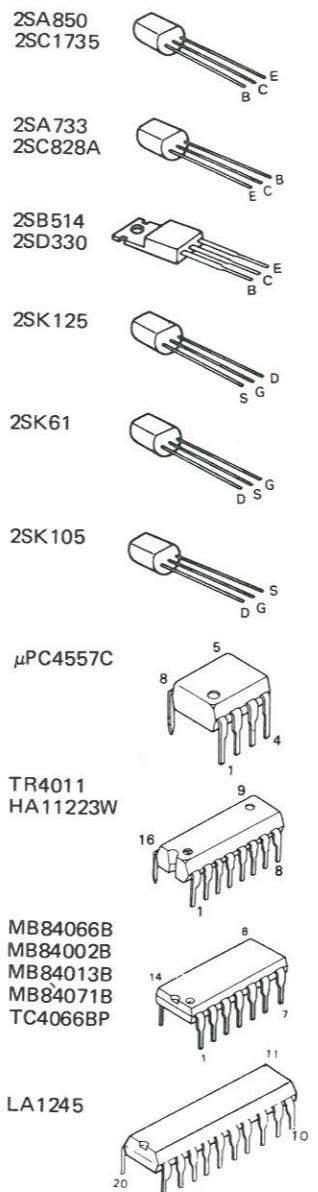

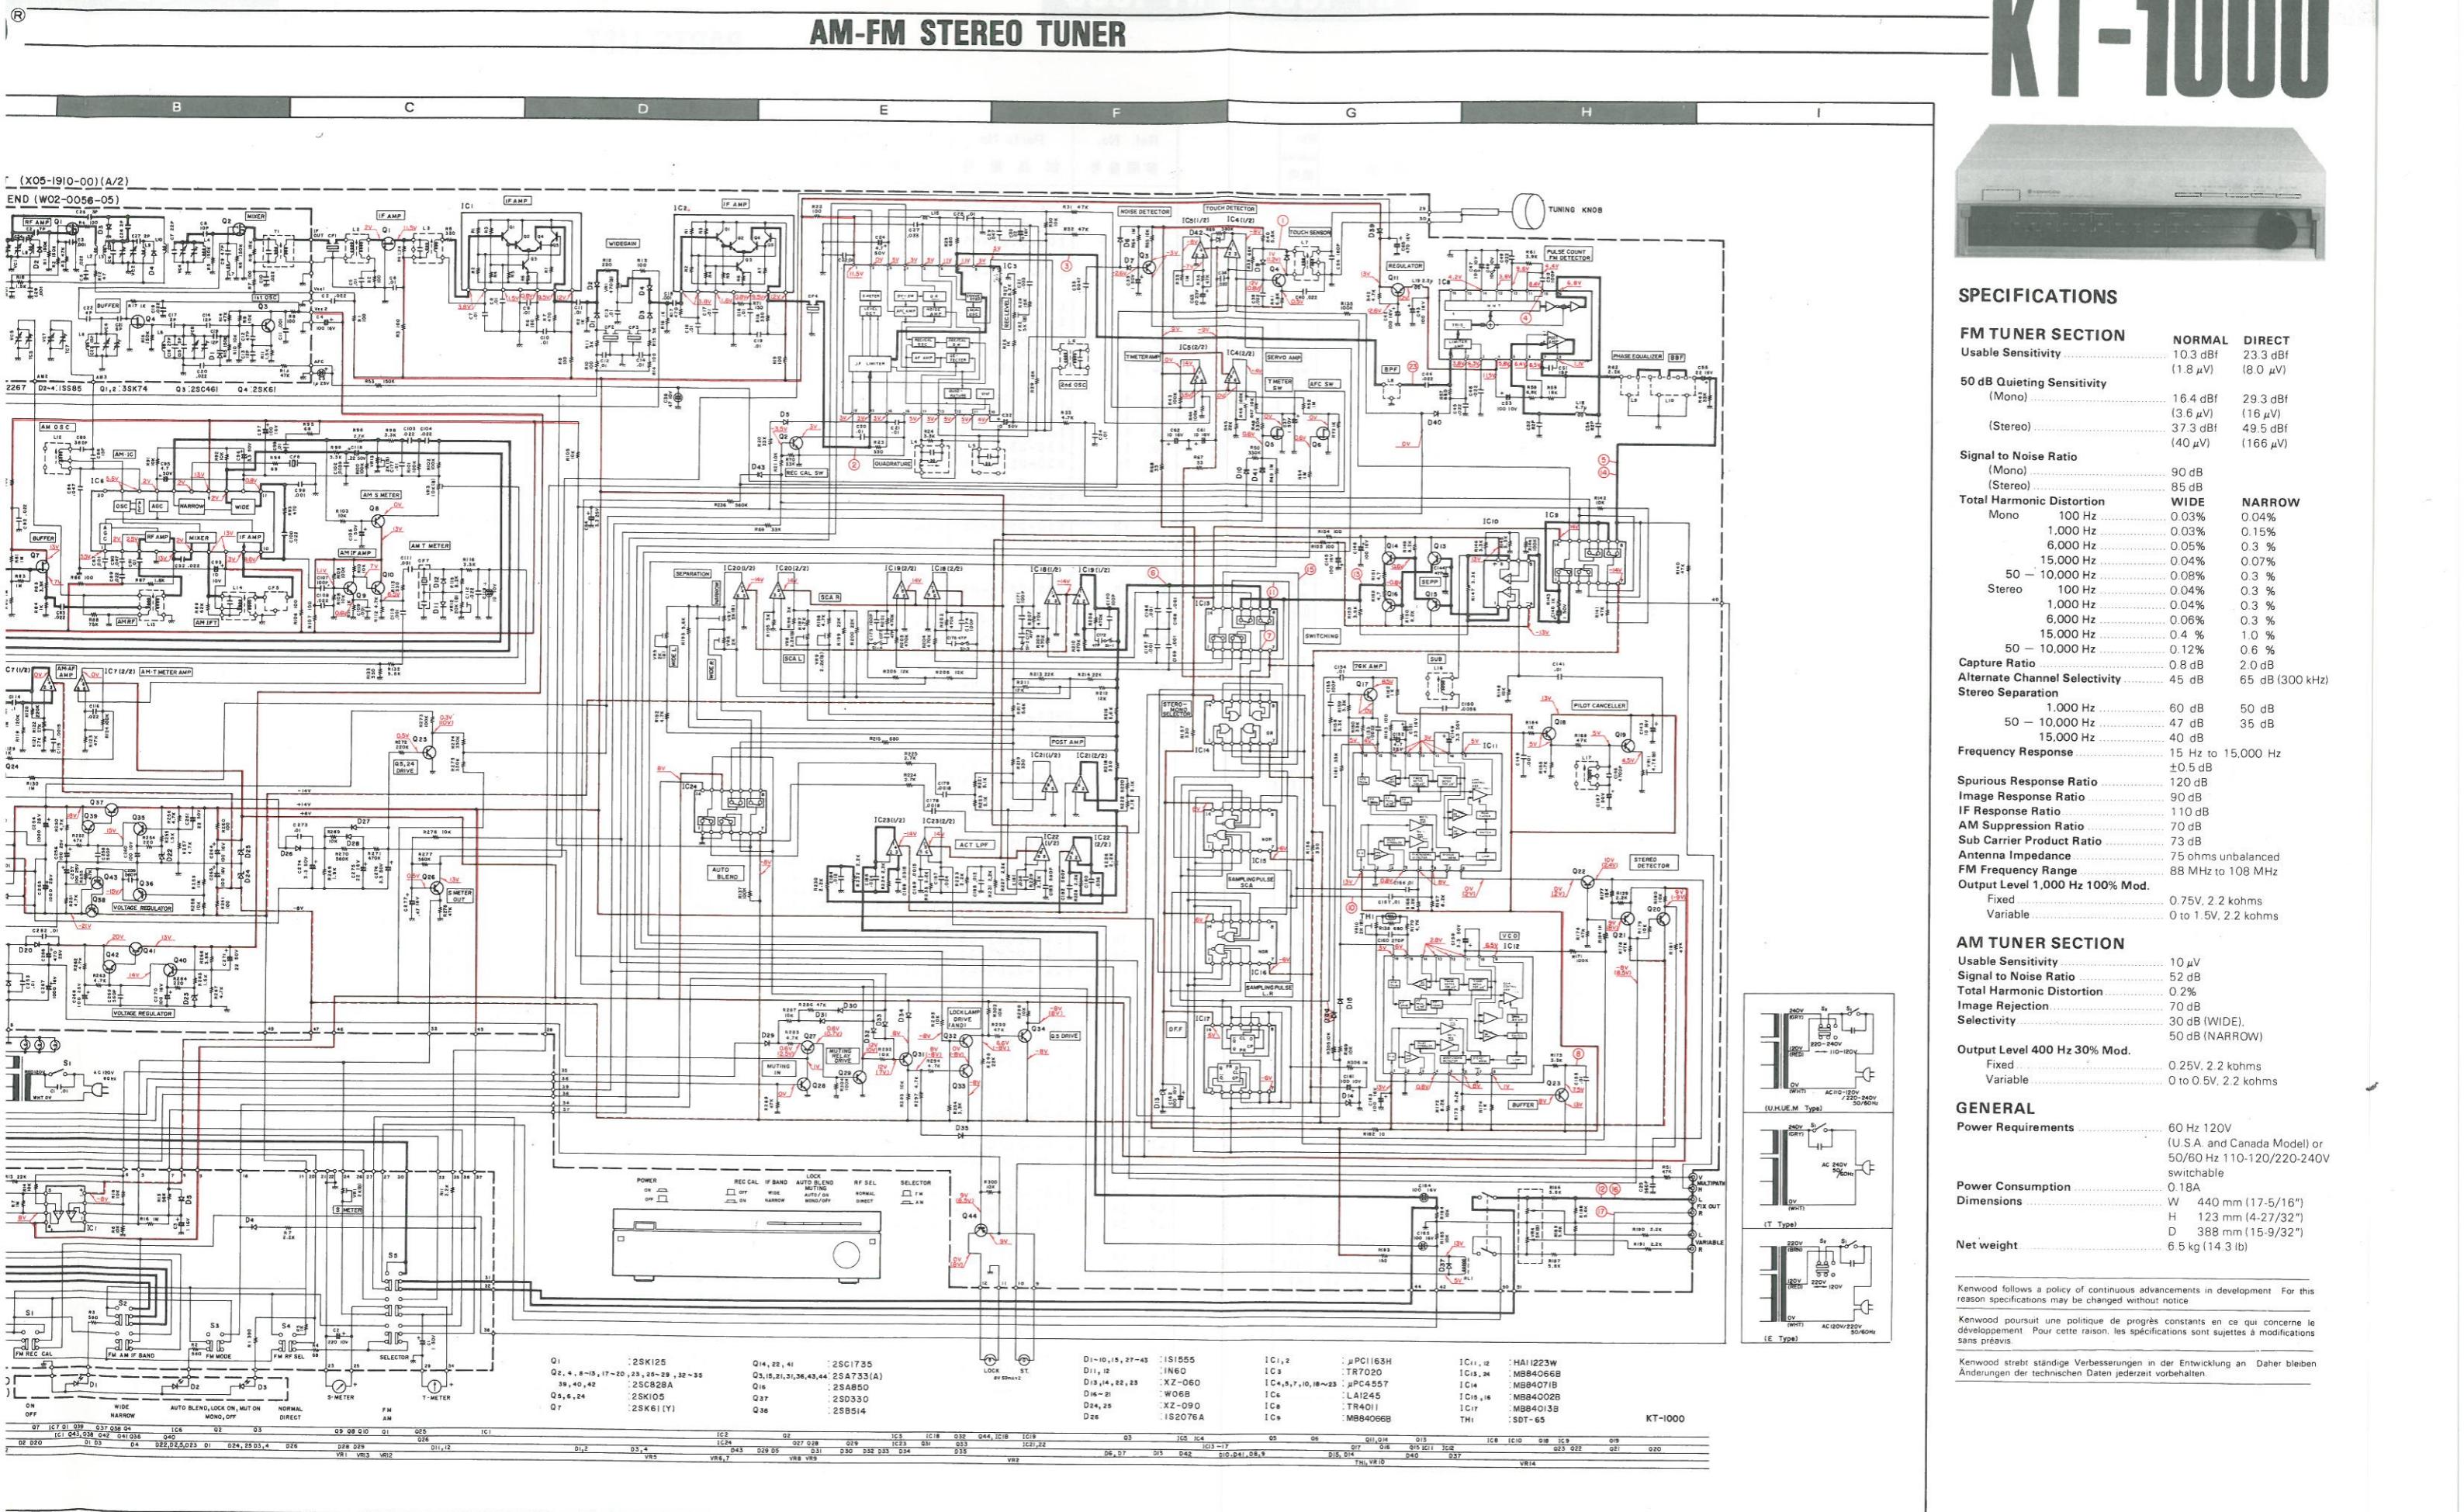

DC voltages are measured by a VOM of 25 k Ω /V
input impedance.

PARTS LIST

INSTRUCTION FOR PARTS LIST

Ref. No.	Parts No.	Description	Re-
参照番号	部品番号	部品名 / 規格	marks 備考
① 18 1A	A01-0608-12	METALLIC CABINET	
19 2A	A2C-1979-11	FRONT PANEL ASSY	PK
19 2A	A2C-1979-11	FRONT PANEL ASSY	SU
19 2A	A2C-1979-11	FRONT PANEL ASSY	XW
19 2A	A2D-1979-11	FRONT PANEL ASSY	
⑤ R221	R43-1333-15	FL-PROOF RD330 J 2H	⑥
R222	R43-1368-15	FL-PROOF RD680 J 2H	
VR1 2	R12-3301-05	TRIMMING POT, 20K(B)	
VR3 4	R19-4305-05	POTENTIOMETER (OUTPUT)	
VR5 6	R12-2302-05	TRIMMING POT, 5K(B)	

- ① Exploded view drawing No.
 ② Position in exploded view.
 ③ Symbol of new parts.
 ④ Area to which parts are shipped. Example: A20-1979-11 is the part No. of FRONT PANEL ASS'Y for the "K" type products (for U.S.A.). When this column is blank, it means that the same type of parts (same parts No.) are used for the products shipped to all areas.
 ⑤ Reference No. in schematic diagram.
 ⑥ Abbreviation of "Flame-proof carbon film resistor"
 All capacitors and resistors are listed using abbreviations.
 Abbreviations:
 * Abbreviations of capacitors (Parts No. with initial letter "C").
 ELECTRO..... Electrolytic capacitor
 LL-ELEC..... Low leak electrolytic capacitor
 NP-ELEC..... Non-pole electrolytic capacitor
 MICA..... Mica capacitor
 POLYSTY..... Polystyrene capacitor
 MYLAR..... Mylar capacitor
 CERAMIC..... Ceramic capacitor
 TANTAL..... Tantalum capacitor
 MF..... Metallized film capacitor
 MP..... Metallized paper capacitor
 OIL..... Oil capacitor
 The unit "UF" is used in lieu of "μF".
 * Abbreviations of resistors (Parts No. with initial letters "R").
 RC..... Carbon composition resistor
 RD..... Carbon film resistor
 FL-PROOF RD.... Flame-proof carbon film resistor
 RW..... Wire wound power resistor
 FL-PROOF RS.... Flame-proof metal oxide film resistor
 RN..... Metal film resistor
 FUSE-RESIST.... Resistor with fuse function
 2B..... Rated wattage 1/8W
 2E..... Rated wattage 1/4W
 2H..... Rated wattage 1/2W
 3A..... Rated wattage 1W
 3D..... Rated wattage 2W
 3F..... Rated wattage 3W
 3G..... Rated wattage 4W
 3H..... Rated wattage 5W
 All resistor values are indicated with the unit (Ω) omitted.
 * Abbreviations common to capacitors and resistors.
 C..... ±0.25pF (Used for capacitors only)
 D..... ±0.5pF (Used for capacitors only)
 F..... ±1%
 G..... ±2%
 J..... ±5%
 K..... ±10%
 M..... ±20%
 Z..... +80% -20% (Used for capacitors only)
 P..... +100% -0% (Used for capacitors only)
 Resistors RD (carbon composition resistors) are not listed in the parts list. For values, refer to the schematic diagram.
 * CODEs in X05-191-***
 K: X05-1910-11 X: X05-1910-71
 U: X05-1910-81 E: X05-1912-71

Ref. No.	Parts No.	Description	Re-
参照番号	部品番号	部品名 / 規格	marks 備考
KT-1000 (UNIT)			
1 2A	-	SUB CHASSIS : METALLIC FRAME	
2 3B	-	REAR PANEL	
3 1B	-	REFLECTOR	
4 2B	-	BOTTOM PLATE	
5 1A	-		
6 3A	A20-1732-02	FRONT PANEL	* K
6 3A	A20-1732-02	FRONT PANEL	MH
6 3A	A20-1732-02	FRONT PANEL	UE
6 3A	A20-1732-02	FRONT PANEL	XE
6 3A	A20-1733-02	FRONT PANEL	* T
7 3B	-	SUB PANEL	
8 2B	A30-0186-03	DIAL BACK BOARD ASSY	*
9 2A	-	TERMINAL BOARD	*
10 2A	A50-0084-02	SIDE PLATE (L)	
11 3B	A50-0085-02	SIDE PLATE (R)	
12 1A	A52-0036-02	TOP PLATE	*
-	B41-0229-04	CAUTION LABEL	K
-	B42-0473-24	LABEL	PU
-	B42-0473-24	LABEL	MH
-	B42-0473-24	LABEL	UE
-	B42-0473-24	LABEL	XT
-	B42-0473-24	LABEL	
-	B46-0055-30	WARRANTY CARD	E
-	B46-0060-00	WARRANTY CARD	P
-	B46-0061-30	WARRANTY CARD	T
-	B46-0062-30	WARRANTY CARD	K
-	B46-0062-30	WARRANTY CARD	UH
-	B46-0063-13	WARRANTY CARD MILITARL	UE
-	B46-0063-13	WARRANTY CARD MILITARL	
-	B46-0064-20	WARRANTY CARD	X
-	B50-3258-00	INSTRUCTION MANUAL	* K
-	B50-3258-00	INSTRUCTION MANUAL	PU
-	B50-3258-00	INSTRUCTION MANUAL	MH
-	B50-3258-00	INSTRUCTION MANUAL	UE
-	B50-3258-00	INSTRUCTION MANUAL	X
-	B50-3258-00	INSTRUCTION MANUAL	* P
-	B50-3259-00	INSTRUCTION MANUAL	
-	B50-3259-00	INSTRUCTION MANUAL	MX
-	B50-3260-00	INSTRUCTION MANUAL	* T
-	B50-3261-00	INSTRUCTION PRINT	E
-	B59-0018-00	INSTRUCTION PRINT	UH
-	B59-0018-00	INSTRUCTION PRINT	UE
13 3A	B07-0345-04	ESCUCHON (TUNING)	
14 3B	B07-0350-04	ESCUCHON	*
15 3A	B10-0288-04	FRONT GLASS	*
17 3B	B20-0482-04	DIAL CALIBRATION	*
18 2B	B21-0046-14	DIAL POINTER	*
19 3A	B30-0261-05	LAMP 8V,15A	*
20 2B	B30-0260-05	LAMP 8V,05A	
21 2B	B30-0127-05	LAMP 8V,05A	
22 2A	B31-0316-05	METER (S)	*
23 2A	B31-0317-05	METER (T)	*
C1	C91-0023-05	CERAMIC 0.01UF AC250V	UM
C1	C91-0023-05	CERAMIC 0.01UF AC250V	HX
C1	C91-0023-05	CERAMIC 0.01UF AC250V	UE
C1	C91-0079-05	CERAMIC 0.01UF AC125V	KP
C1	C91-0079-05	CERAMIC 0.01UF AC125V	TE
30 2A	D15-0073-14	PULLEY	
31 3B	D15-0174-05	PULLEY ASSY	
32 2A	D15-0176-03	PULLEY	
33 2B	D20-0158-03	DIAL SHAFT ASSY	*

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名／規格	Re- marks 備考
IC6	V30-0519-10	LA1245	
IC7	V30-0273-20	UPC4557C	
IC8	V30-0509-10	TR4011	
IC9	V30-0516-10	MB84066B	
IC10	V30-0273-20	UPC4557C	
IC11,12	V30-0266-20	HA11223W	
IC13	V30-0516-10	MB84066B	
IC14	V30-0530-10	M684071B	
IC15,16	V30-0528-10	MB84002B	
IC17	V30-0529-10	MB84013B	
IC18-23	V30-0273-20	UPC4557C	
IC24	V30-0516-10	MB84066B	
Q1	V09-0136-10	2SK125	
Q2	V03-0504-05	2SC828A	
Q3	V01-0733-90	2SA733(A)	
Q4	V03-0504-05	2SC828A	
Q5 -6	V09-0127-40	2SK105(H,J)	
Q7	V09-0124-20	2SK61(Y)	
Q8 -11	V03-0504-05	2SC828A	
Q13	V03-0504-05	2SC828A	
Q14	V03-0452-05	2SC1735	
Q15	V01-0733-90	2SA733(A)	
Q16	V01-0173-05	2SA850	
Q17 -20	V03-0504-05	2SC828A	
Q21	V01-0733-90	2SA733(A)	
Q22	V03-0452-05	2SC1735	
Q23	V03-0504-05	2SC828A	
Q24	V09-0127-40	2SK105(H,J)	
Q25 -29	V03-0504-05	2SC828A	
Q31	V01-0733-90	2SA733(A)	
Q32 -35	V03-0504-05	2SC828A	
Q36	V01-0733-90	2SA733(A)	
Q37	V04-0330-00	2SD330	
Q38	V02-0514-20	2SB514(E,F)	
Q39 -40	V03-0504-05	2SC828A	
Q41	V03-0452-05	2SC1735	
Q42	V03-0504-05	2SC828A	
Q44	V01-0733-90	2SA733(A)	
TH1	V22-0006-05	SDT-65	
-	W02-0056-05	FM FRONT END	*
SWITCH (X13-2960-00)			
D1 -3	B30-0264-05	LAMP(LED)	*
D4 -5	V11-0076-05	1S1555	
IC1	V30-0273-20	UPC4557C	
C1	C24-1710-57	ELECTRO 1UF	50W
C2	C24-1022-71	ELECTRO 220UF	10W
C3	C24-1710-57	ELECTRO 1UF	50W
VR1	R12-1303-05	TRIMMING POT.	2K
VR2	R12-2302-05	TRIMMING POT.	5K
S1 -5	S42-5022-05	PUSH SWITCH	*
FRONTEND (W02-0056-00)			
D1	V11-2200-30	1S2267	
D2 -4	V11-7702-00	1SS5	
Q1 -2	V09-1002-56	3SK74	
Q3	V03-0461-20	2SC461	
Q4	V09-0124-20	2SK61	
E05-0127-05 PLUG			

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名／規格	Re- marks 備考	Ref. No. 参照番号	Parts No. 部品番号	Description 部品名／規格	Re- marks 備考			
-	E05-0127-05	PLUG	KP	S2	S31-2053-05	SLIDE SWITCH	UM			
-	E05-0127-05	PLUG	UM	S2	S31-2053-05	SLIDE SWITCH	H			
-	E05-0127-05	PLUG	H	S2	S31-2053-05	SLIDE SWITCH	UE			
-	E05-0127-05	PLUG	UE	S2	S31-2053-05	SLIDE SWITCH	XE			
-	E05-0127-05	PLUG	XT	-	T90-0101-05	ANTENNA ADAPTER				
-	E19-0211-05	PLUG	E	-	T90-0202-05	ANTENNA FM INDOOR				
34 1B	E30-0505-05	AUDIO CORD		50 1B	T90-0111-05	ANTENNA AM LOOP				
34 1B	E13-0116-05	PHONO JACK (AM IF OUT)	KP	51 2B	X05-1910-11	TUNER PCB ASSY	*K			
34 1B	E13-0116-05	PHONO JACK (AM IF OUT)	UH	51 2B	X05-1910-11	TUNER PCB ASSY	P			
34 1B	E13-0116-05	PHONO JACK (AM IF OUT)	UE	51 2B	X05-1910-71	TUNER PCB ASSY	*X			
35 1B	E20-0228-05	TERMINAL BOARD	*	51 2B	X05-1910-81	TUNER PCB ASSY	*U			
36 1B	E30-0181-05	POWER CORD	KP	51 2B	X05-1910-81	TUNER PCB ASSY	MH			
36 1B	E30-0459-05	POWER CORD	E	51 2B	X05-1910-81	TUNER PCB ASSY				
36 1B	E30-0545-05	POWER CORD	UM	51 2B	X05-1910-81	TUNER PCB ASSY	UE			
36 1B	E30-0545-05	POWER CORD	H	51 2B	X05-1912-71	TUNER PCB ASSY	*T			
36 1B	E30-0587-05	POWER CORD	UE	51 2B	X05-1912-71	TUNER PCB ASSY	E			
36 1B	E30-0649-05	POWER CORD	T	52 3B	X13-2960-00	SWITCH PCB ASSY				
37 2B		SLIDER	X	TUNER (X05-191*-**)						
38 2B	G01-0368-04	COILED SPRING		C1 2	C91-0085-05	CERAMIC 0.022UF	N			
-	H01-3219-04	CARTON BOX	UM	C3	C26-1410-57	NP-ELEC 1UF	25WV			
-	H01-3219-04	CARTON BOX	HX	C4	C25-1210-77	LL-ELEC 100UF	16WV			
-	H01-3219-04	CARTON BOX	UE	C5 -14	C91-0083-05	CERAMIC 0.01UF	N			
-	H01-3220-04	CARTON BOX	P	C15	C52-1710-26	CERAMIC 0.001UF	K			
-	H01-3221-04	CARTON BOX	E	C16 -22	C91-0083-05	CERAMIC 0.01UF	N			
-	H01-3259-04	CARTON BOX	K	C24	C25-1710-57	LL-ELEC 1UF	50WV			
-	H01-3274-04	CARTON BOX	T	C25	C52-1756-16	CERAMIC 560PF	K			
-	H10-1562-02	POLYSTYRENE FIXTURE		C26	C25-1210-67	LL-ELEC 10UF	16WV			
-	H20-0453-04	COVER		C27	C91-0085-05	CERAMIC 0.022UF	N			
-	H25-0078-04	BAG		C28	C91-0083-05	CERAMIC 0.01UF	N			
-	H25-0096-04	BAG		C29	C55-1747-38	CERAMIC 0.047UF	Z			
39 1B	J19-0564-05	HOLDER		C30	C24-1222-67	ELECTRO 22UF	16WV			
40 2B		MOUNTING HARDWARE		C31	C91-0085-05	CERAMIC 0.022UF	N			
41 1B	J42-0083-05	BUSHING (POWER CORD)	KP	C32	C25-1210-67	LL-ELEC 10UF	16WV			
41 1B	J42-0083-05	BUSHING (POWER CORD)	UM	C34	C91-0083-05	CERAMIC 0.01UF	N			
41 1B	J42-0083-05	BUSHING (POWER CORD)	H	C35	C25-1710-47	LL-ELEC 0.1UF	50WV			
41 1B	J42-0083-05	BUSHING (POWER CORD)	UE	C36	C91-0085-05	CERAMIC 0.022UF	N			
41 1B	J42-0083-05	BUSHING (POWER CORD)	TE	C37	C25-1710-57	LL-ELEC 1UF	50WV			
41 1B	J42-0085-05	BUSHING (POWER CORD)	X	C38	C26-1447-67	NP-ELEC 47UF	25WV			
42 2B		RAIL		C39	C91-0085-05	CERAMIC 0.022UF	N			
43 3A	K21-0390-04	KNCB (TUNING)		C40	C91-0141-05	CERAMIC 0.047UF	M			
44 1B	K23-0351-04	KNCB (LEVEL)	*	C42 43	C25-1210-77	LL-ELEC 100UF	16WV			
45 3A	K27-0189-04	KNCB (POWER)		C44	C91-0085-05	CERAMIC 0.022UF	N			
46 3A	K27-0193-04	KNCB (SELECTOR)	*	C47 48	C24-1010-79	ELECTRO 100UF	10WV			
47 2A	L01-2201-05	POWER TRANSFORMER	K	C49	C91-0140-05	CERAMIC 0.022UF	M			
47 2A	L01-2201-05	POWER TRANSFORMER	P	C50	C58-1710-15	CERAMIC 100PF	J			
47 2A	L01-2202-05	POWER TRANSFORMER	T	C51	C71-1715-06	CERAMIC 15PF	J			
47 2A	L01-2204-05	POWER TRANSFORMER	U	C52	C71-1782-05	CERAMIC 82PF	J			
47 2A	L01-2204-05	POWER TRANSFORMER	MH	C53	C24-1010-79	ELECTRO 100UF	10WV			
47 2A	L01-2204-05	POWER TRANSFORMER	UE	C54	C71-1782-05	CERAMIC 82PF	J			
47 2A	L01-2204-05	POWER TRANSFORMER	X	C55	C24-1222-67	ELECTRO 22UF	16WV			
47 2A	L01-2207-05	POWER TRANSFORMER	E	C56	C71-1718-16	CERAMIC 180PF	K			
48 3A	N14-0127-04	NUT		C61 62	C25-1210-67	LL-ELEC 10UF	16WV			
49 2A	J42-0092-04	BUSHING	*	C63	C25-1410-67	LL-ELEC 10UF	25WV			
S1	S40-1022-05	PUSH SWITCH	UM	C64	C25-1733-57	LL-ELEC 3.3UF	50WV			
S1	S40-1022-05	PUSH SWITCH	HX	C65	C24-1247-71	ELECTRO 470UF	16WV			
S1	S40-1022-05	PUSH SWITCH	UE	C81	C71-1733-06	CERAMIC 33PF	K			
S1	S40-1024-05	PUSH SWITCH	KP	C84	C55-1747-38	CERAMIC 0.047UF	Z			
S1	S40-1025-05	PUSH SWITCH	TE	C85	C48-1736-15	POLYSTY 360PF	J			
S1				C86	C71-1703-01	CERAMIC 3PF	C			
S1				C87	C52-1710-26	CERAMIC 0.001UF	K			
S1				C90	C55-1747-38	CERAMIC 0.047UF	Z			
S1				C93	C25-1210-67	LL-ELEC 10UF	16WV			
S1				C95	C25-1747-57	LL-ELEC 4.7UF	50WV			

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名／規格	Re- marks 備考	Ref. No. 参照番号	Parts No. 部品番号	Description 部品名／規格	Re- marks 備考
C96	C25-1733-57	LL-ELEC 3.3UF 50WV		-	E13-0615-05	PHONO JACK (6P)	
C97	C25-1210-77	LL-ELEC 100UF 16WV		100	E04-0005-05	RECEPTACLE	
C99	C52-1710-26	CERAMIC 0.001UF K		CF1 -4	L79-0130-05	CERAMIC FILTER KIT FM	KU
C102	C46-1739-25	MYLAR 0.0039UF J		CF1 -4	L79-0130-05	CERAMIC FILTER KIT FM	X
C103,104	C46-1722-35	MYLAR 0.022UF J		CF1 -4	L79-0134-05	CERAMIC FILTER KIT FM	E
C105	C25-1710-57	LL-ELEC 1UF 50WV		CF5 -7	L79-0138-05	CERAMIC FILTER KIT AM	
C107	C71-1710-15	CERAMIC 100PF J		L1	L40-2292-11	INDUCTOR 2.2UH	
C109	C46-1710-25	MYLAR 0.001UF J		L2	L30-0319-05	IFT FM	
C111	C52-1710-26	CERAMIC 0.001UF K		L3	L30-0318-05	IFT FM	
C113,114	C25-1710-47	LL-ELEC 0.1UF 50WV		L4	L30-0361-05	IFT FM	
C115	C46-1715-25	MYLAR 0.0015UF J		L5	L39-0089-05	COIL	
C117	C46-1710-35	MYLAR 0.01UF J		L6	L32-0252-05	OSCILLATING COIL	FM
C119	C26-1010-67	NP-ELEC 10UF 10WV		L7	L32-0242-05	OSCILLATING COIL LW	
C140	C25-1710-47	LL-ELEC 0.1UF 50WV		L8	L79-0120-05	FILTER (BPF)	
C141	C91-0083-05	CERAMIC 0.01UF N		L9	L79-0139-05	FILTER	
C142	C25-1210-77	LL-ELEC 100UF 16WV		L10	L79-0125-05	FILTER (BBF)	
C143	C25-1210-67	LL-ELEC 10UF 16WV		L11	L31-0463-05	RF COIL AM	
C145	C25-1210-77	LL-ELEC 100UF 16WV		L12	L32-0254-05	OSCILLATING COIL AM	
C146	C47-1747-25	POLYSTY 4700PF J		L13	R31-0464-15	RF COIL AM	
C147	C25-1710-57	LL-ELEC 1UF 50WV		L14	R30-0337-05	IFT AM	
C148	C46-1710-25	MYLAR 0.001UF J		L15	L40-2292-11	INDUCTOR 2.2UH	
C149	C25-1733-57	LL-ELEC 3.3UF 50WV		L16	L35-0059-05	MPX COIL	
C150	C46-1782-25	MYLAR 0.0082UF J		L18	L40-2292-11	INDUCTOR 2.2UH	
C151	C25-1233-67	LL-ELEC 33UF 16WV		L19	L40-4721-28	INDUCTOR 4.7UH	
C152	C25-1722-57	LL-ELEC 2.2UF 50WV		R61	R49-6239-23	RN 3.9K F 2E	
C153	C46-1722-25	MYLAR 0.0022UF J		R67	R43-1233-05	FL-PROOF RD33 J 2E	
C154	C91-0083-05	CERAMIC 0.01UF N		R151	R43-1247-95	FL-PROOF RD4.7 J 2E	
C155	C71-1710-15	CERAMIC 100PF J		R156	R43-1233-15	FL-PROOF RD330 J 2E	
C156,158	C91-0083-05	CERAMIC 0.01UF N		R182	R43-1222-05	FL-PROOF RD22 J 2E	
C159	C25-1733-57	LL-ELEC 3.3UF 50WV		R183	R43-1215-15	FL-PROOF RD150 J 2E	
C160	C48-1727-15	POLYSTY 270PF J		R207	R48-6247-33	RN 47 J 2E	
C161,162	C24-1010-79	ELECTRO 100UF 10WV		R260	R43-1210-15	FL-PROOF RD100 J 2E	
C163	C25-1210-77	LL-ELEC 100UF 16WV		R301	R40-8318-58	RC 1.8M M 2H	
C164,165	C26-1210-77	NP-ELEC 100UF 16WV		VR1	R12-0302-05	TRIMMING POT. 500	
C166,169	C46-1710-25	MYLAR 0.001UF J		VR2	R12-2302-05	TRIMMING POT. 5K	
C170,171	C91-0185-05	POLYSTY 100PF G		VR3	R12-3302-05	TRIMMING POT. 10K	
C172,173	C91-0184-05	POLYSTY 47PF G		VR5	R12-1303-05	TRIMMING POT. 2K	
C174,175	C91-0185-05	POLYSTY 100PF G		VR6	R12-2302-05	TRIMMING POT. 5K	
C176,177	C91-0184-05	POLYSTY 47PF G		VR8	R12-1303-05	TRIMMING POT. 2K	
C178,179	C46-1718-25	MYLAR 0.0018UF J		VR11	R12-2302-05	TRIMMING POT. 5K	
C180,181	C46-1736-35	MYLAR 0.036UF J		VR12	R12-3060-05	TRIMMING POT. 20K	
C182,183	C47-1756-15	POLYSTY 560PF J		VR13	R12-1050-05	TRIMMING POT. 2K	
C184,185	C46-1712-35	MYLAR 0.012UF J		VR14	R06-2012-05	POTENTIOMETER 5K(B)	
C186,187	C46-1724-35	MYLAR 0.024UF J		RL1	S51-2037-05	RELAY	
C188,189	C46-1715-25	MYLAR 0.0015UF J		S1	S31-4011-05	SLIDE SWITCH	KU
C250-253	C55-1710-38	CERAMIC 0.01UF Z		D1 -5	V11-0076-05	1S1555	
C254,255	C24-1410-81	ELECTRO 1000UF 25WV		D7	V11-0076-05	1S1555	
C256,257	C24-1410-71	ELECTRO 100UF 25WV		D9	V11-0076-05	1S1555	
C258,259	C52-1756-16	CERAMIC 560PF K		D10	V11-0076-05	1S1555	
C260	C24-1010-79	ELECTRO 100UF 10WV		D11	V11-0051-05	1N60	
C261	C24-1222-67	ELECTRO 22UF 16WV		D13	V11-4101-20	XZ-060	
C264,265	C24-1010-79	ELECTRO 100UF 10WV		D15	V11-0076-05	1S1555	
C267	C24-1210-81	ELECTRO 1000UF 16WV		D16	V11-0295-05	W06B	
C268	C24-1410-71	ELECTRO 100UF 25WV		D22	V11-4101-20	XZ-060	
C269	C52-1756-16	CERAMIC 560PF K		D24	V11-4167-06	XZ-090	
C270	C24-1010-79	ELECTRO 100UF 10WV		D26	V11-0273-05	1S2076A	
C273	C55-1710-38	CERAMIC 0.01UF Z		D27	V11-0076-05	1S1555	
C274	C25-1733-57	LL-ELEC 3.3UF 50WV		IC1	V30-0513-10	UPC1163H	
C275	C24-1222-67	ELECTRO 22UF 16WV		IC3	V30-0510-10	TR7020	
C276	C25-1733-57	LL-ELEC 3.3UF 50WV		IC4	V30-0273-20	UPC4557C	
C277	C25-1747-47	LL-ELEC 0.47UF 50WV					