

Service Manual

Tuner

ST-G560

Color

QUARTZ Synthesizer
AM/FM Stereo Tuner



(K)...Black Type
(S)...Silver Type

Area

Country Code	Area	Color
(EG)	F.R. Germany	(K) (S)
(Ei)	Italy	(K) (S)

SPECIFICATIONS

(DIN 45 500)

■ FM TUNER SECTION

Frequency range	87.50~108.00 MHz
	87.525~108.00 MHz (+25 kHz shift)
Sensitivity	1.5 μ V (IHF, usable)
S/N 30 dB	1.3 μ V (75 Ω)
S/N 26 dB	1.2 μ V (75 Ω)
S/N 20 dB	0.9 μ V (75 Ω)
IHF 46 dB stereo quieting sensitivity	28 μ V/75 Ω
Total harmonic distortion	
MONO (normal)	0.015 %
STEREO (normal)	0.02 %
S/N	
MONO	72 dB (80 dB, IHF)
STEREO	66 dB (73 dB, IHF)
Frequency response	4 Hz~15 kHz, +0.5 dB~-1.0 dB
Alternate channel selectivity	
normal \pm 400 kHz	50 dB
super narrow \pm 200 kHz	25 dB
Capture ratio	1.0 dB
Image rejection at 98 MHz	100 dB
IF rejection at 98 MHz	100 dB
Spurious response rejection at 98 MHz	110 dB
AM suppression	55 dB
Stereo separation	
1 kHz	55 dB
10 kHz	40 dB
Carrier leak	
19 kHz	-75 dB (-80 dB, IHF)
38 kHz	-75 dB (-80 dB, IHF)
Channel balance (250 Hz~6,300 Hz)	\pm 1.0 dB
Limiting point	0.85 μ V
Bandwidth	
IF amplifier	180 kHz
FM demodulator	1000 kHz
Antenna terminals	75 Ω (unbalanced)

■ AM TUNER SECTION

Frequency range	522 kHz~1611 kHz (9-kHz steps)
	530 kHz~1620 kHz (10-kHz steps)
Sensitivity (S/N 20 dB)	20 μ V, 300 μ V/m
Selectivity (\pm 9 kHz)	50 dB
Image rejection	40 dB
IF rejection	60 dB

■ GENERAL

Output voltage	0.45 V (0.9 V IHF)
Power consumption	9 W
Power supply	AC 50 Hz/60 Hz, 220 V
Dimensions (W \times H \times D)	430 \times 69 \times 298 mm (16-15/16" \times 2-23/32" \times 11-23/32")
Weight	2.7 kg (6 lb.)

Note:

Specifications are subject to change without notice. Weight and dimensions are approximate.

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan


CONTENTS

	Page		Page
ACCESSORIES	2	BLOCK DIAGRAM	9, 10
CONNECTIONS	2	SCHEMATIC DIAGRAM	11~14
LOCATION OF CONTROLS	3	CIRCUIT BOARDS AND WIRING CONNECTION	
DISASSEMBLY INSTRUCTIONS	4, 5	DIAGRAM	15, 16
MEASUREMENTS AND ADJUSTMENTS	6, 7	FUNCTIONS OF IC TERMINALS	17
DESCRIPTION OF FL PANEL	8	REPLACEMENT PARTS LIST	18~21
TERMINAL GUIDE OF IC'S, TRANSISTORS AND		EXPLODED VIEW	22
DIODES	8		

ACCESSORIES

- Stereo connection cable (SJP2276) 1
- FM indoor antenna (SSA270M) 1
- AM loop antenna (SPB1162T) 1
- AM antenna holders (SMA233-1M) 1
- (SMA231M) 1
- Screws (XTB3+10AFZ) 2
- AC power supply cord (SFDAC05E03) 1

CONNECTIONS

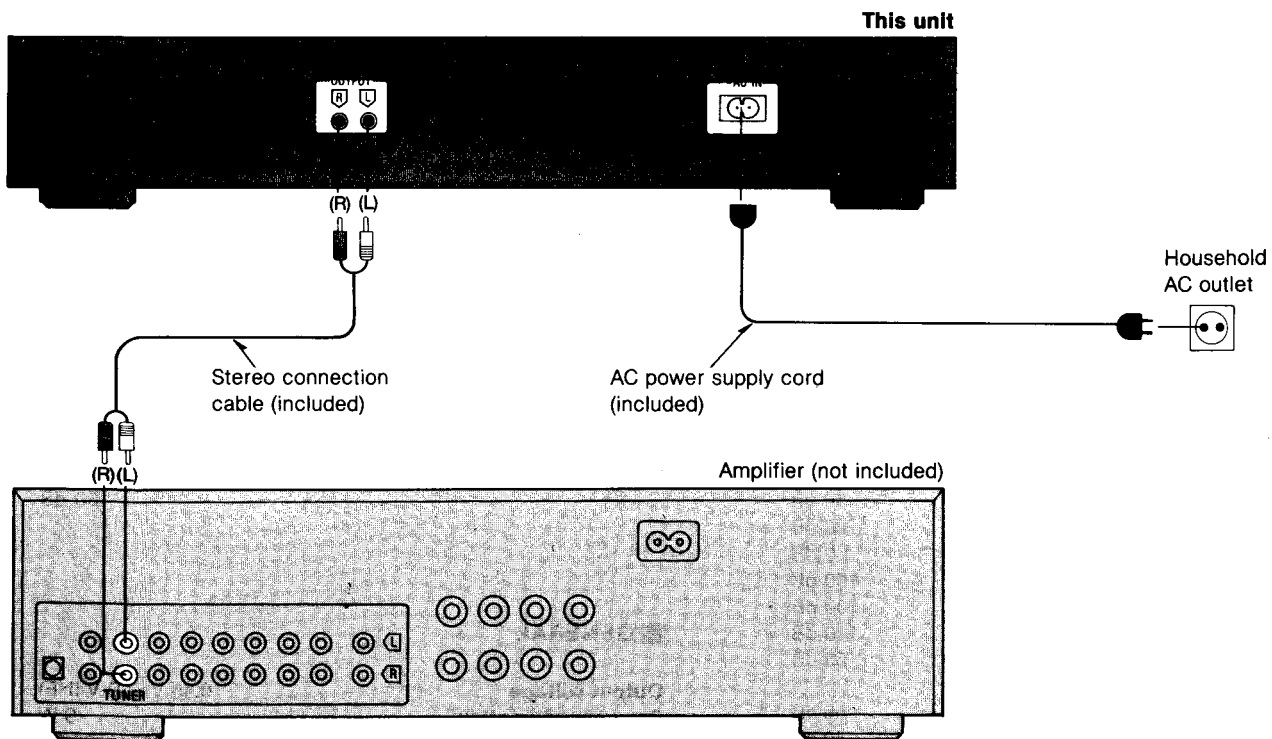

Tuner

ST-G560**DEUTSCH****■ MESSUNGEN UND EINSTELL METHODEN****■ FM****Einstellungen der Bedienelemente und zu verwendende Geräte.**

- UKW Meßsender (UKW Nebsender)
- Stereo-Modulator
- Verzerrungs-Analysator
- Elektronische Wechselstrom- und Gleichstrom-Voltmeter (EVM)
- Keramischer Kondensator (200pF)
- Oszilloskop
- Frequenzzähler
- Drosselspule (100µH)
- Widerstand (100 KΩ)

Anmerkung: Für Z201, Z202, L301, L303 und L304, werdevon justiert Ersatzteil geliefert. Den Kern dieses Teils daher nicht drehen.

UKW-MONO-VERZERRUNGS-JUSTIERUNG

1. Der Testaufbau ist in der Abbildung gezeigt.
2. Stellen Sie die Einheit auf "FM (UKW)" Betrieb.
3. Die Radiofrequenzanzeige und den Messender auf **100.10 MHz** einstellen.
4. Den Kern von **T101** so justieren, daß die im Signalzustand gemessene Spannung **0 mV (0 ± 20 mV)** im 300 mV-Bereich beträgt.
5. **T102** so justieren, daß der Verzerrungsfaktor des linken Kanals minimal wird.
6. Schritte 4 und 5 einige Male wiederholen.
7. Versichern Sie sich, daß die Verzerrungsfaktoren von Kanal L und Kanal R annähernd gleich sind und auf ein Minimum gehalten sind.

Anmerkung:
Für die Justierung ist ein Schraubendreher aus Kunststoff zu verwenden.

TRENNUNGS-JUSTIERUNG

1. Der Testaufbau ist in der Abbildung gezeigt.
2. Stellen Sie die Einheit auf "FM und IF normal" Betrieb.
3. Die Radiofrequenzanzeige und den Messender auf **100.10 MHz** einstellen.
4. **VR301** so justieren, daß der R-Ausgang minimal ist, wenn der Stereomodulator im L-Betriebszustand (Linker Kanal moduliert) ist.

UKW-STEREO-VERZERRUNGS-JUSTIERUNG

1. Der Testaufbau ist in der Abbildung gezeigt.
2. Stellen Sie die Einheit auf "FM (UKW)" Betrieb.
3. Die Radiofrequenzanzeige und den Messender auf **100.10 MHz** einstellen.
4. **L1** so justieren, daß der Verzerrungsfaktor des linken Kanals minimal wird.
5. Versichern Sie sich, daß die Verzerrungsfaktoren von Kanal L und Kanal R annähernd gleich sind und auf ein Minimum gehalten sind.


Anmerkung:
1. Für die Justierung ist ein Schraubendreher aus Kunststoff zu verwenden.
2. **L1** sollte nicht mehr als 1/4 Drehung (90 Grad) nach einer Seite gedreht werden.

UKW-SIGNALSTÄRKEPEGELS-JUSTIERUNG

1. Für den Anschluß des Prüfgerätes siehe die Abbildung.
2. Das Gerät auf "FM und IF normal" stellen.
3. Das Hochfrequenz-Anzeigegerät und den Signalgenerator auf **100.10 MHz** stellen.
4. Durch Drücken der UKW-Signaltaste das Flüssigkristalldisplay von "frequency" auf "dB" umschalten.
5. **VR101** so einstellen, daß **54 dB** angezeigt wird. "54 dB" wird auf dem Flüssigkristalldisplay angezeigt.
6. Die Schritte 4, 5 wiederholen.


LOCATION OF CONTROLS

Control section

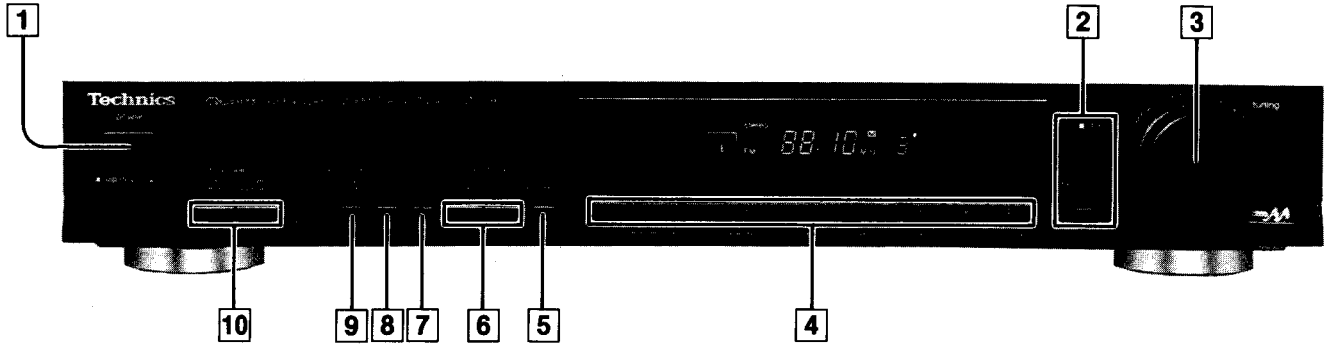

- | | |
|--|--|
| <p>1 Power “standby $\text{\textcircled{I}}$/on” switch
(power “standby $\text{\textcircled{I}}$/on”)</p> <p>2 Tuning-mode selector/indicator (tuning mode)</p> <p>3 Tuning control (tuning)</p> <p>4 Preset-tuning buttons (1–0)
(39 channel random preset tuning)</p> <p>5 Memory button (memory)</p> | <p>6 Preset channel buttons (preset channel)</p> <p>7 FM signal-strength indication button
(FM-signal)</p> <p>8 FM mode selector (FM-mode)</p> <p>9 FM IF band selector (FM-IF band)</p> <p>10 Band selectors (band selector)</p> |
|--|--|







Display section

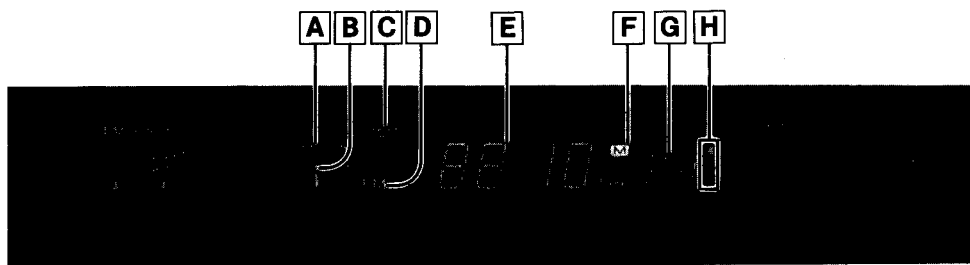

- | | |
|--|--|
| <p>A FM IF band indicator (FM auto IF)</p> <p>B Quartz-lock indicator ()</p> <p>C FM stereo indicator (stereo)</p> <p>D Band indicator (band)</p> | <p>E Digital frequency display</p> <p>F Memory indicator (M)</p> <p>G Channel display (channel)</p> <p>H FM mode indicator (FM mode)</p> |
|--|--|

※The operating procedures and features are similar to those for and of the ST-G550.

DISASSEMBLY INSTRUCTIONS
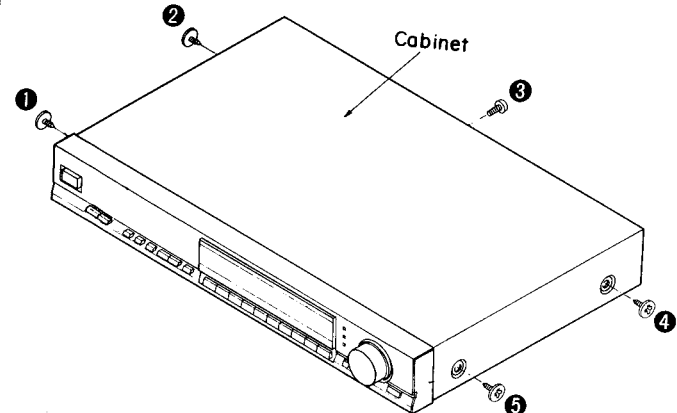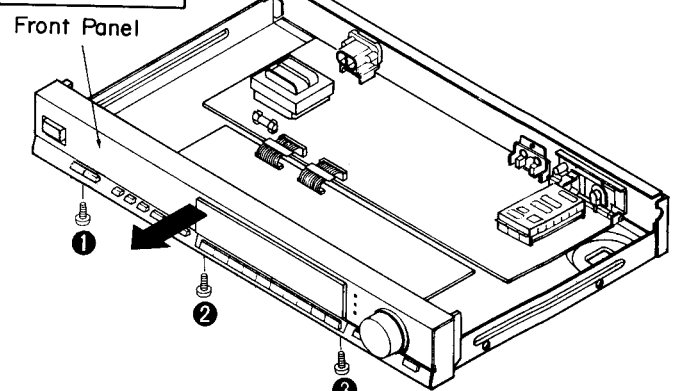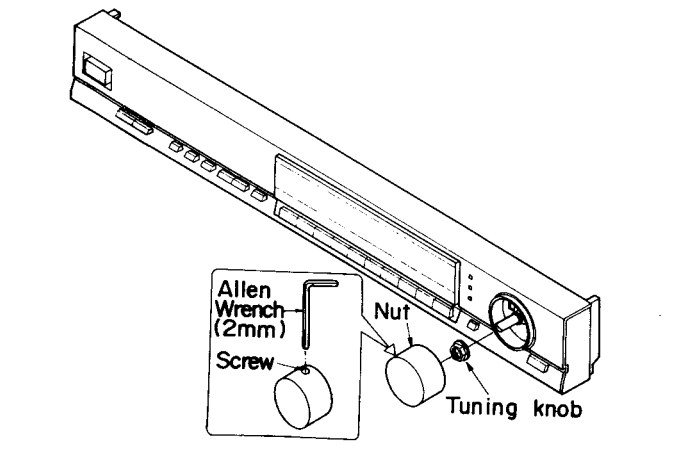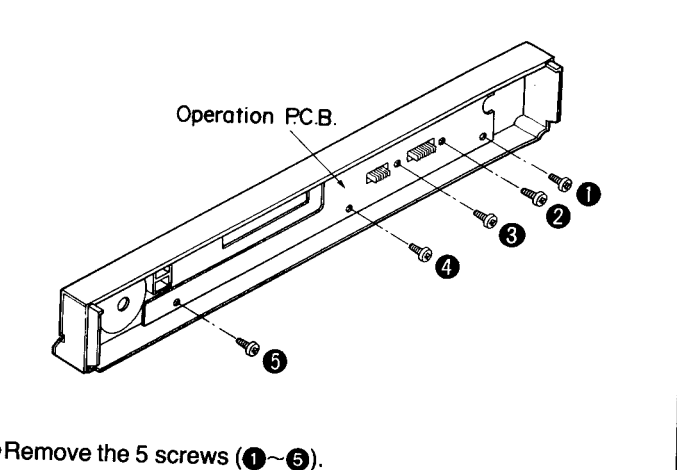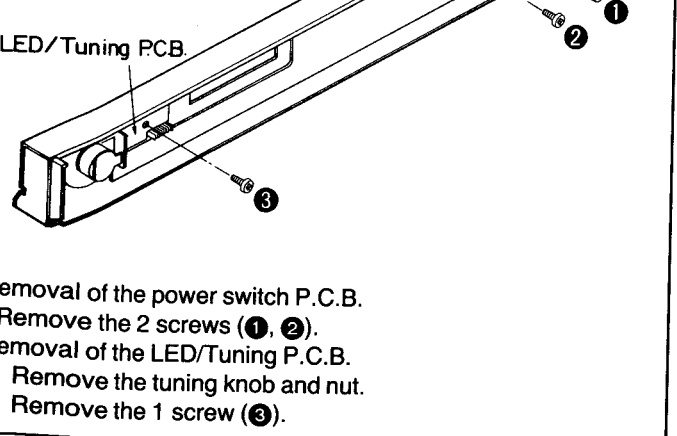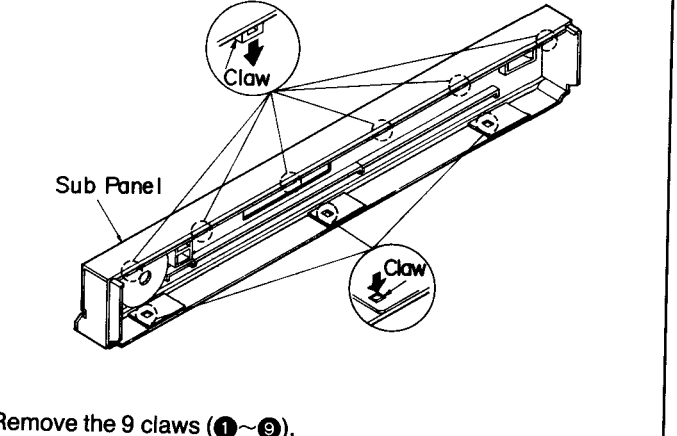
<p>Ref. No. 1</p>	<p>Removal of the cabinet</p>	<p>Ref. No. 2</p>	<p>Removal of the front panel</p>
<p>Procedure 1</p>		<p>Procedure 1→2</p>	
 <p>●Remove the 5 screws (1~5).</p>		 <p>1. Remove the 3 screws (1~3). 2. Remove the front panel in the direction of the arrow.</p>	
<p>Ref. No. 3</p>	<p>Removal of the power switch P.C.B. and LED/Tuning P.C.B.</p>	<p>Ref. No. 4</p>	<p>Removal of the operation P.C.B.</p>
<p>Procedure 1→2→3</p>		<p>Procedure 1→2→3→4</p>	
 <p>Allen Wrench (2mm) Screw Nut Tuning knob</p>		 <p>●Remove the 5 screws (1~5).</p>	
<p>Ref. No. 5</p>	<p>Removal of the sub panel</p>	<p>Ref. No. 5</p>	<p>Removal of the sub panel</p>
<p>Procedure 1→2→3→4→5</p>		<p>Procedure 1→2→3→4→5</p>	
 <p>Power Switch P.C.B. LED/Tuning P.C.B.</p> <p>Removal of the power switch P.C.B. ●Remove the 2 screws (1, 2). Removal of the LED/Tuning P.C.B. 1. Remove the tuning knob and nut. 2. Remove the 1 screw (3).</p>		 <p>●Remove the 9 claws (1~9).</p>	

Ref. No. 6	Removal of the FL Drive P.C.B.
Procedure 1→6	<p style="text-align: center;">How to remove the connector.</p> <p style="text-align: center;">●Remove the 2 claws.</p> <ol style="list-style-type: none"> 1. Remove the 4 screws (①~④). 2. Remove the 2 connectors (CN106, CN107). 3. Remove the FL drive P.C.B. in the direction of the arrow.

Ref. No. 7	Removal of the power supply P.C.B.
Procedure 1→7	<ol style="list-style-type: none"> 1. Remove the 7 screws (①~⑦). 2. Remove the 2 connectors (CN106, CN107). 3. Remove the power supply P.C.B. in the direction of the arrow.

Ref. No. 8	Checking of the FL drive P.C.B. and power supply P.C.B.
Procedure 1→8	<ol style="list-style-type: none"> 1. Remove the 11 screws (①~⑪). 2. Pull out the front panel in the direction of the arrow (A). 3. Remove the bottom chassis in the direction of the arrow (B). 4. Reinstall the front panel to the FL drive P.C.B.


●When checking the soldered surfaces of main P.C.B. and replacing the parts, do as show.

1. Remove the 11 screws (①~⑪).
2. Pull out the front panel in the direction of the arrow (A).
3. Remove the bottom chassis in the direction of the arrow (B).
4. Reinstall the front panel to the FL drive P.C.B.

Labels: Front Panel, Power Supply P.C.B., Bottom Chassis, FL Drive P.C.B.

● Replacement of the Foot.

1. Remove the 4 heat melted posts on the chassis with a pair of nippers or similar tool.
2. To replace the foot (RKA0009) on the chassis, melt the 4 posts with a soldering iron.

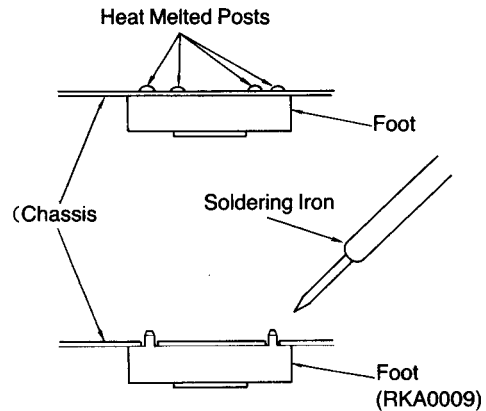

■ MEASUREMENTS AND ADJUSTMENTS

■ FM

Control positions and equipment used

- FM signal generator (FM-SG)
- Stereo modulator
- Distortion analyser
- Oscilloscope
- Frequency counter.
- Choke coil (100 μ H)
- Resistor(100k Ω)
- Ceramic capacitor(200pF)
- AC and DC electronic voltmeter(EVM)

Note: For Z201, Z202, L301, L303 and L304, they are supplied as adjusted parts. So, do not turn the cores of the parts. It is not necessary to adjust the AM circuit.


FM MONO DISTORTION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "FM" mode.
3. Set the radio frequency display and signal generator to 100.10MHz.
4. Adjust the core of T101 so that the voltage measured in signal mode is 0mV(0 \pm 20mV) in 300mV range.
5. Adjust T102 so that the distortion factor of L-CH is minimized.
6. Repeat steps 4 and 5.
7. Make sure that the distortion factors of L-CH and R-CH are nearly the same and minimum.

Note: The adjusting screwdriver used should be made of resin.

FM SIGNAL GENERATOR CONDITION

Modulation100%
Modulation frequency1kHz
Output level66dB

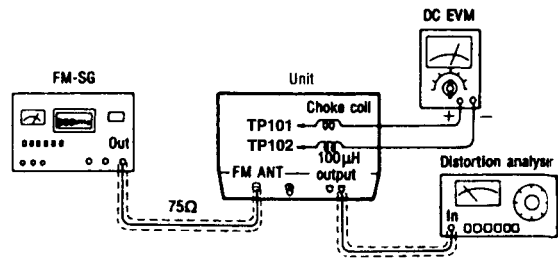


SEPARATION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "FM and IF normal" mode.
3. Set the radio frequency display and signal generator to 100.10MHz.
4. Adjust VR301 so that the R-CH output is minimized when stereo modulator is in "L"(L-CH modulation) mode.

FM SIGNAL GENERATOR CONDITION

Modulation.....Stereo "L" mode or "R".
mode 45%, Pilot 10 %
Modulation frequency1kHz(Pilot 19kHz)
Output level66dB

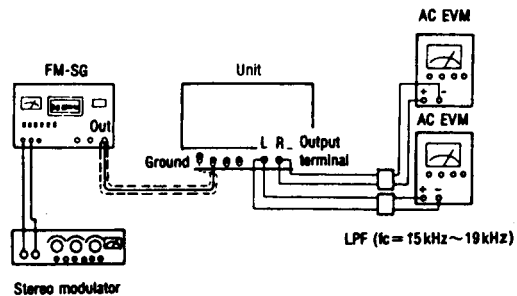


FM STEREO DISTORTION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "FM" mode.
3. Set the radio frequency display and signal generator to 100.10 MHz.
4. Adjust L1 so that the distortion factor of L-CH is minimized.
5. Make sure that the distortion factors of L-CH and R-CH are nearly the same with each other to minimum.

- Notes:**
1. The adjusting screwdriver used should be made of resin.
 2. L1 should be rotated no more 1/4 turn (90 deg.) on either side.


FM SIGNAL GENERATOR CONDITION
 Modulation.....Stereo "L" mode or "R" mode 45%, Pilot 10%
 Modulation frequency.....1 kHz (Pilot 19 kHz)
 Output level.....66 dB

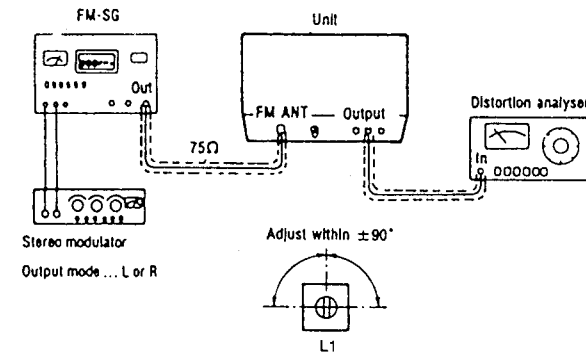

FM SIGNAL STRENGTH LEVEL ADJUSTMENT


1. Test equipment connection is shown in figure.
2. Set the unit to "FM and IF normal" mode.
3. Set the radio frequency display and signal generator to 100.10 MHz.
4. Change FL display from "frequency" to "dB" by pressing the FM signal button.
5. Adjust VR101 so that 54 dB is indicated. "54 dB" is indicated on the FL display.
6. Repeat steps 4, 5.

FM SIGNAL GENERATOR CONDITION
 Modulation.....30%
 Modulation frequency.....1 kHz
 Output level.....60 dB

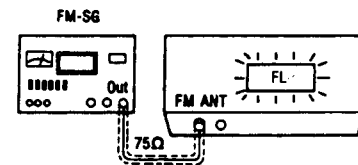

DESCRIPTION OF FL PANEL

GRID ASSIGNMENT

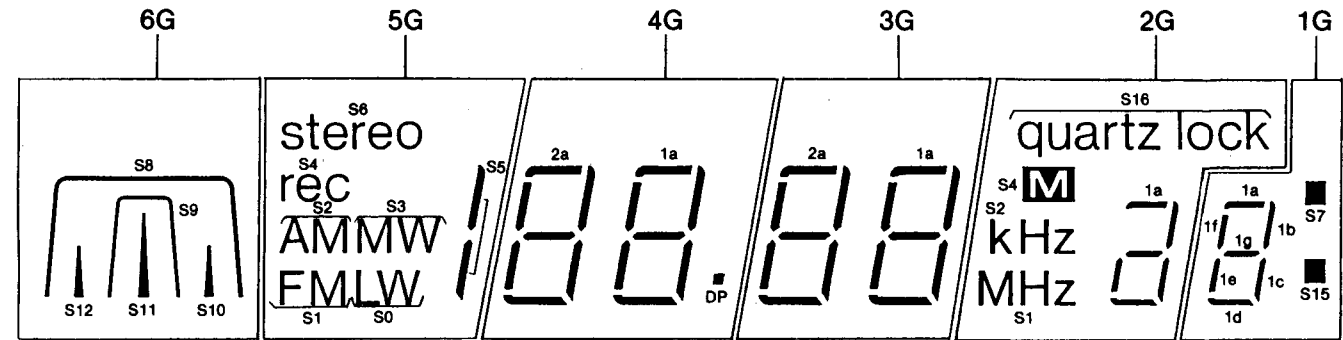


PIN CONNECTION

PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	
CONNECTION	F	F	N	S	S	G	S	S	S	S	S	S	S	S	S	S	S	S	S	N	N	N	N	N	N	N	S	N	S	S	S	N	F	F	F	F


ANODE CONNECTION

	6G	5G	4G	3G	2G	1G
S0	-	LW	2d	2d	-	-
S1	-	FM	2e	2e	MHz	-
S2	-	AM	2c	2c	kHz	-
S3	-	MW	2g	2g	-	-
S4	-	rec	2f	2f	M	-
S5	-	/	2b	2b	-	-
S6	-	stereo	2a	2a	-	-
S7	-	-	-	-	-	■
S8	∩	-	1d	1d	1d	1d
S9	∩	-	1e	1e	1e	1e
S10		-	1c	1c	1c	1c
S11		-	1g	1g	1g	1g
S12		-	1f	1f	-	1f
S13	-	-	1b	1b	1b	1b
S14	-	-	1a	1a	1a	1a
S15	-	-	DP	-	-	■
S16	-	-	-	-	quartz lock	-


TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

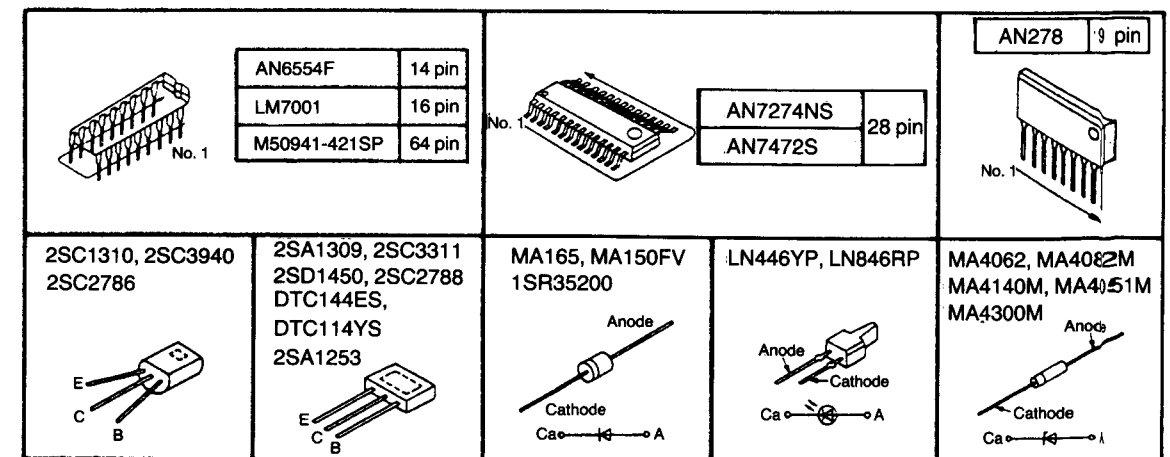


Adjustment points.

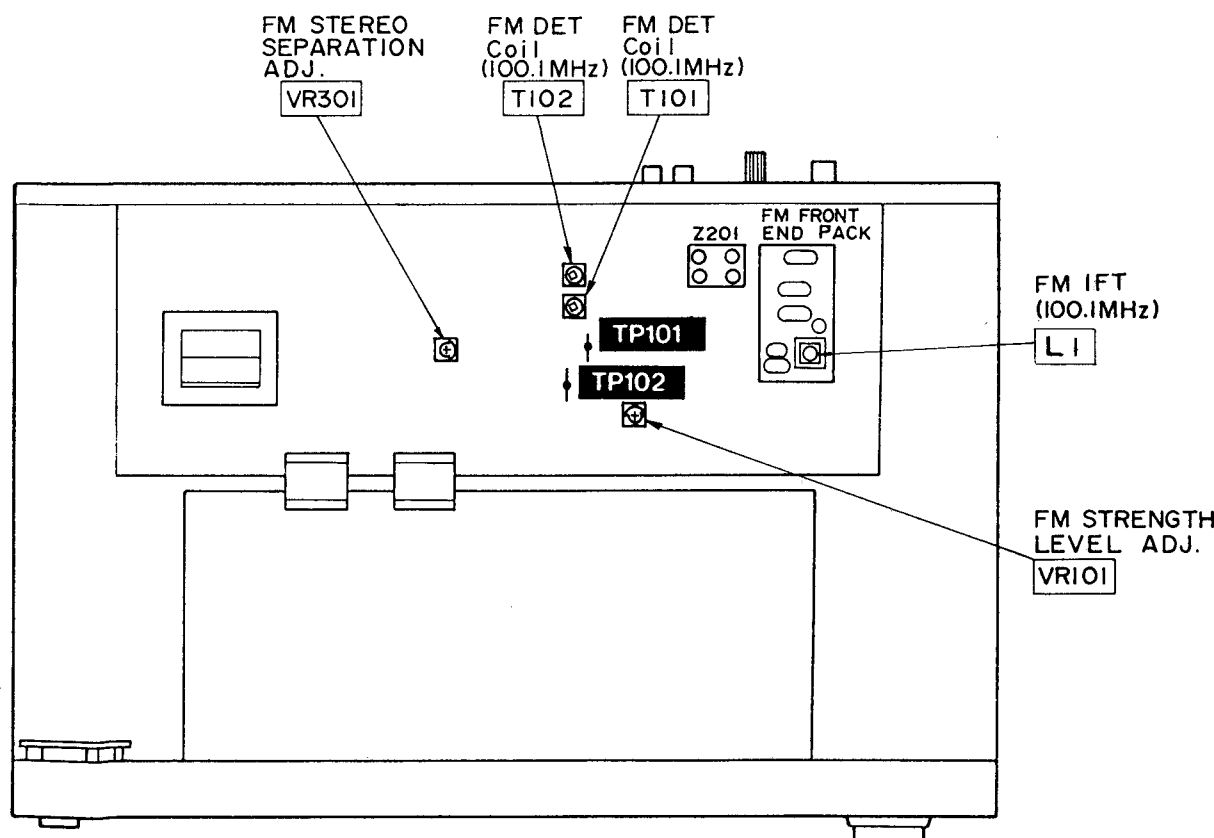


■ BLOCK DIAGRAM

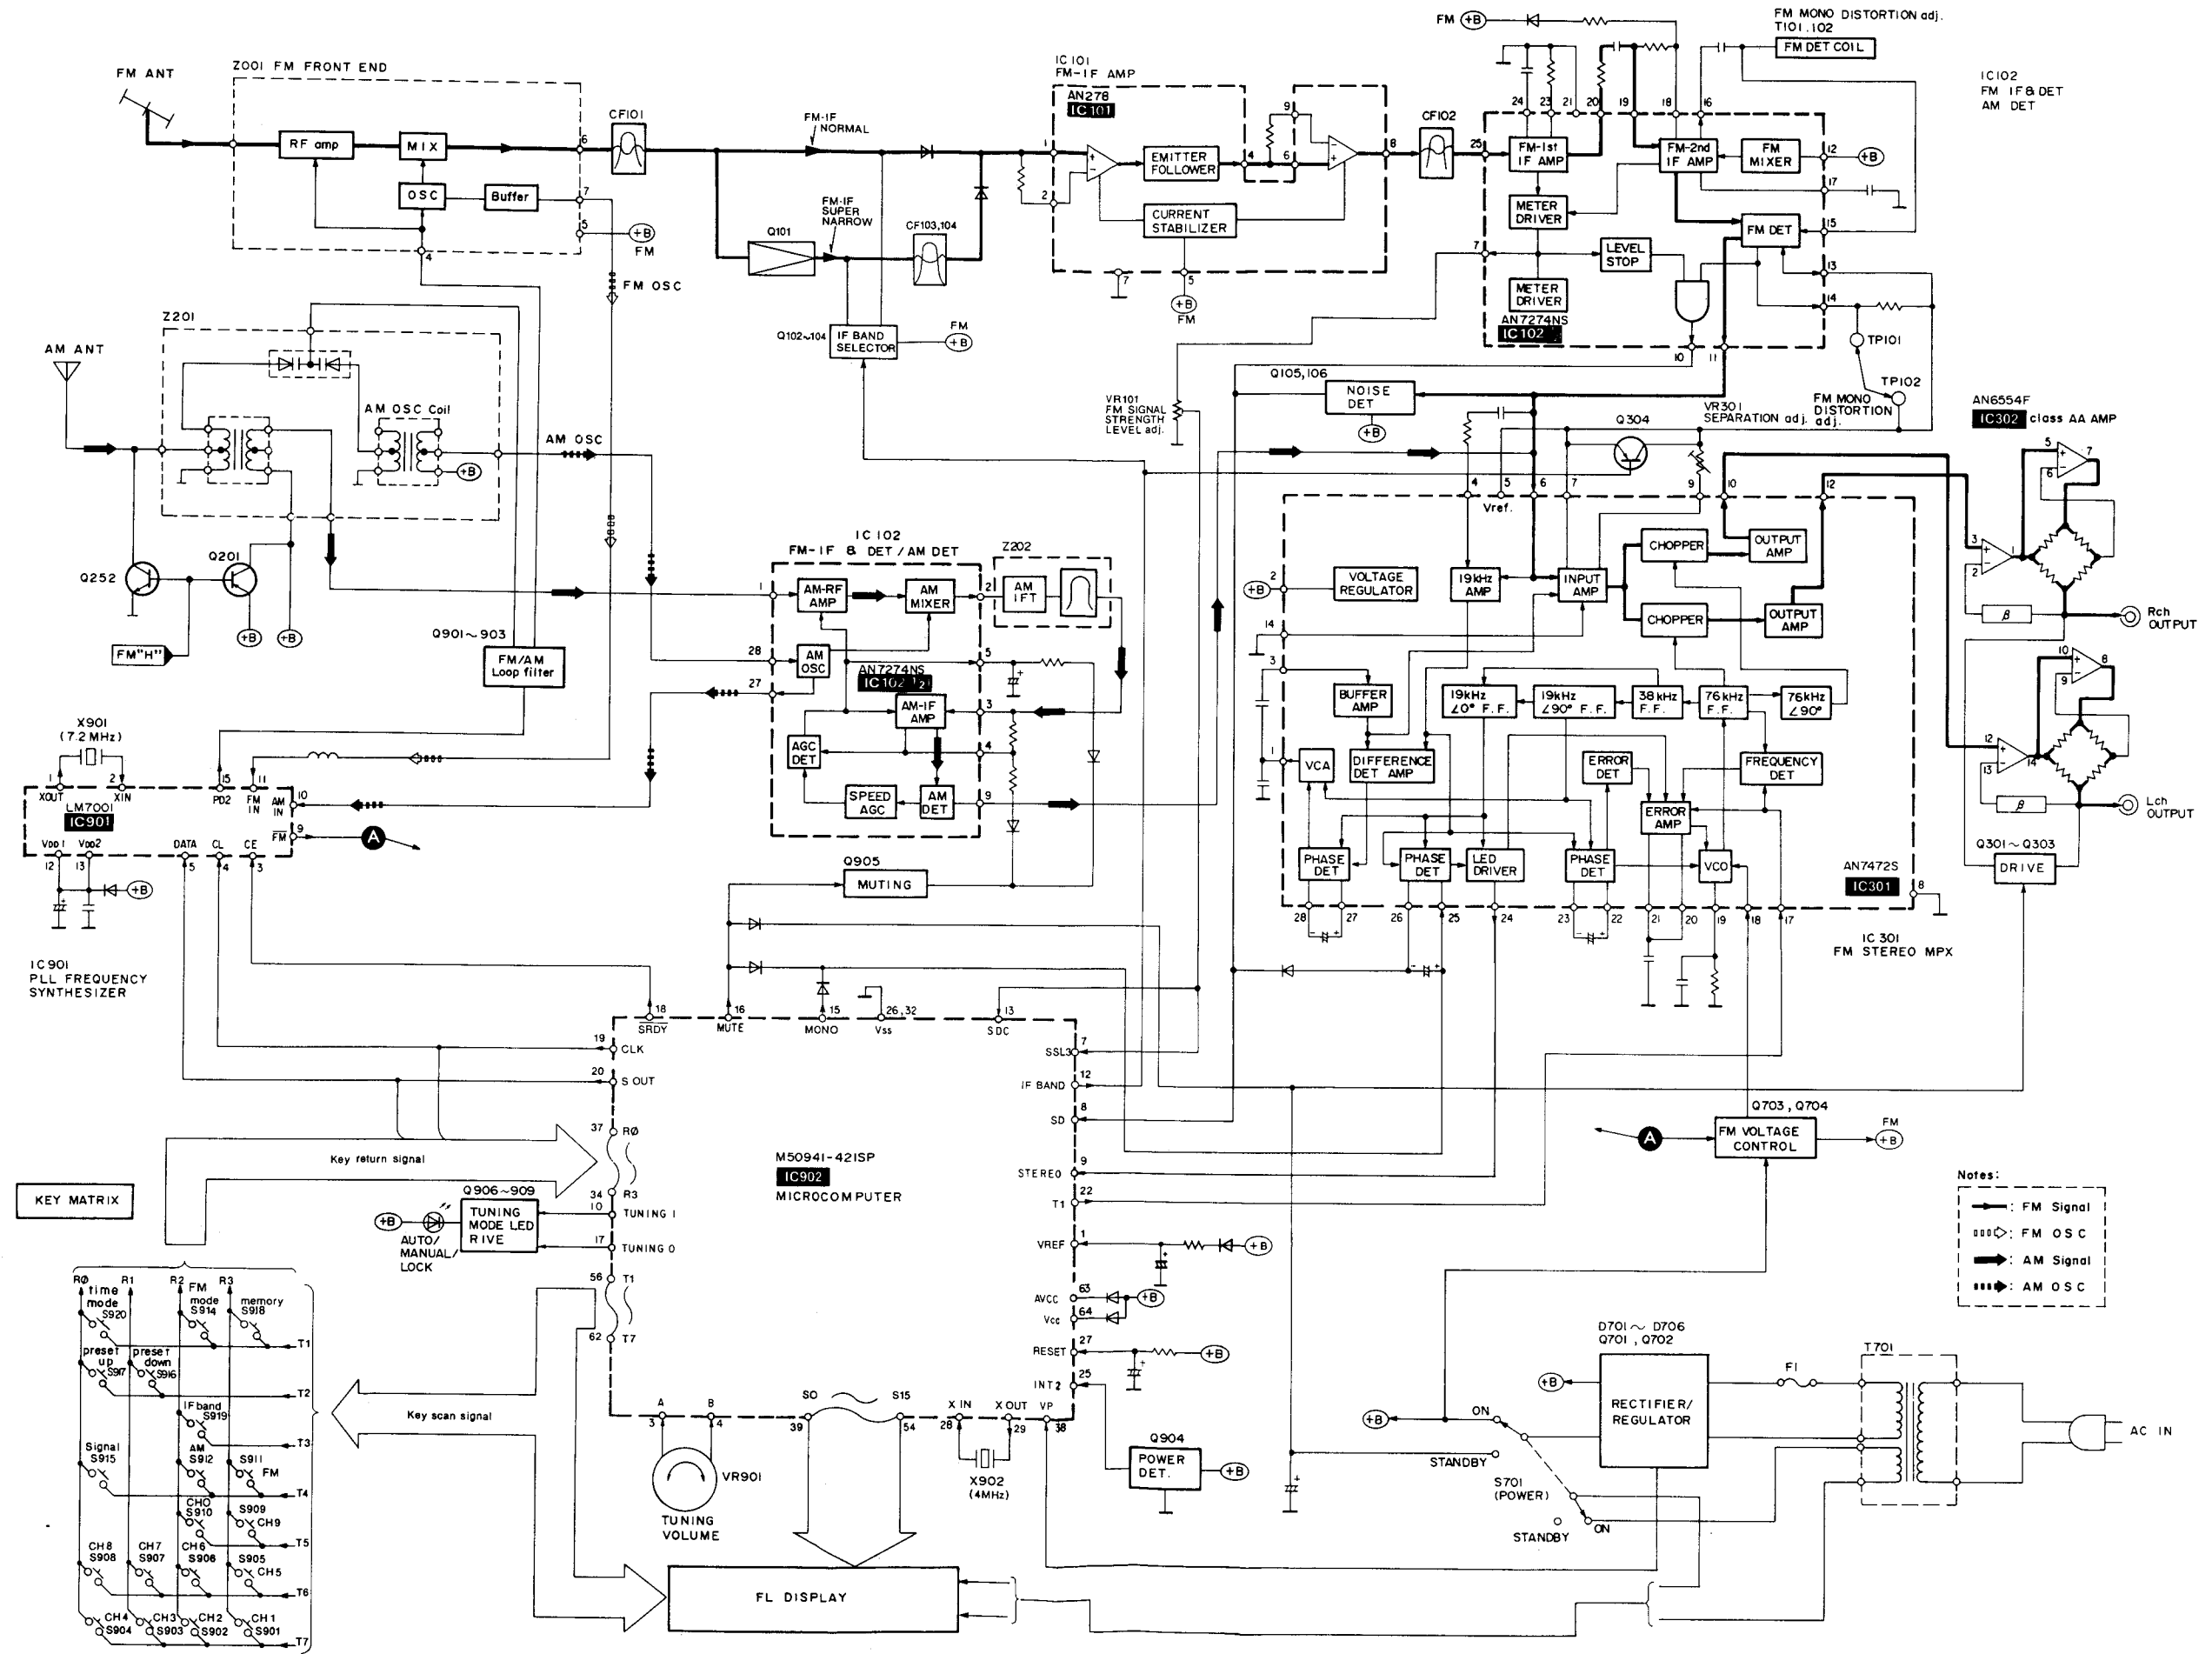

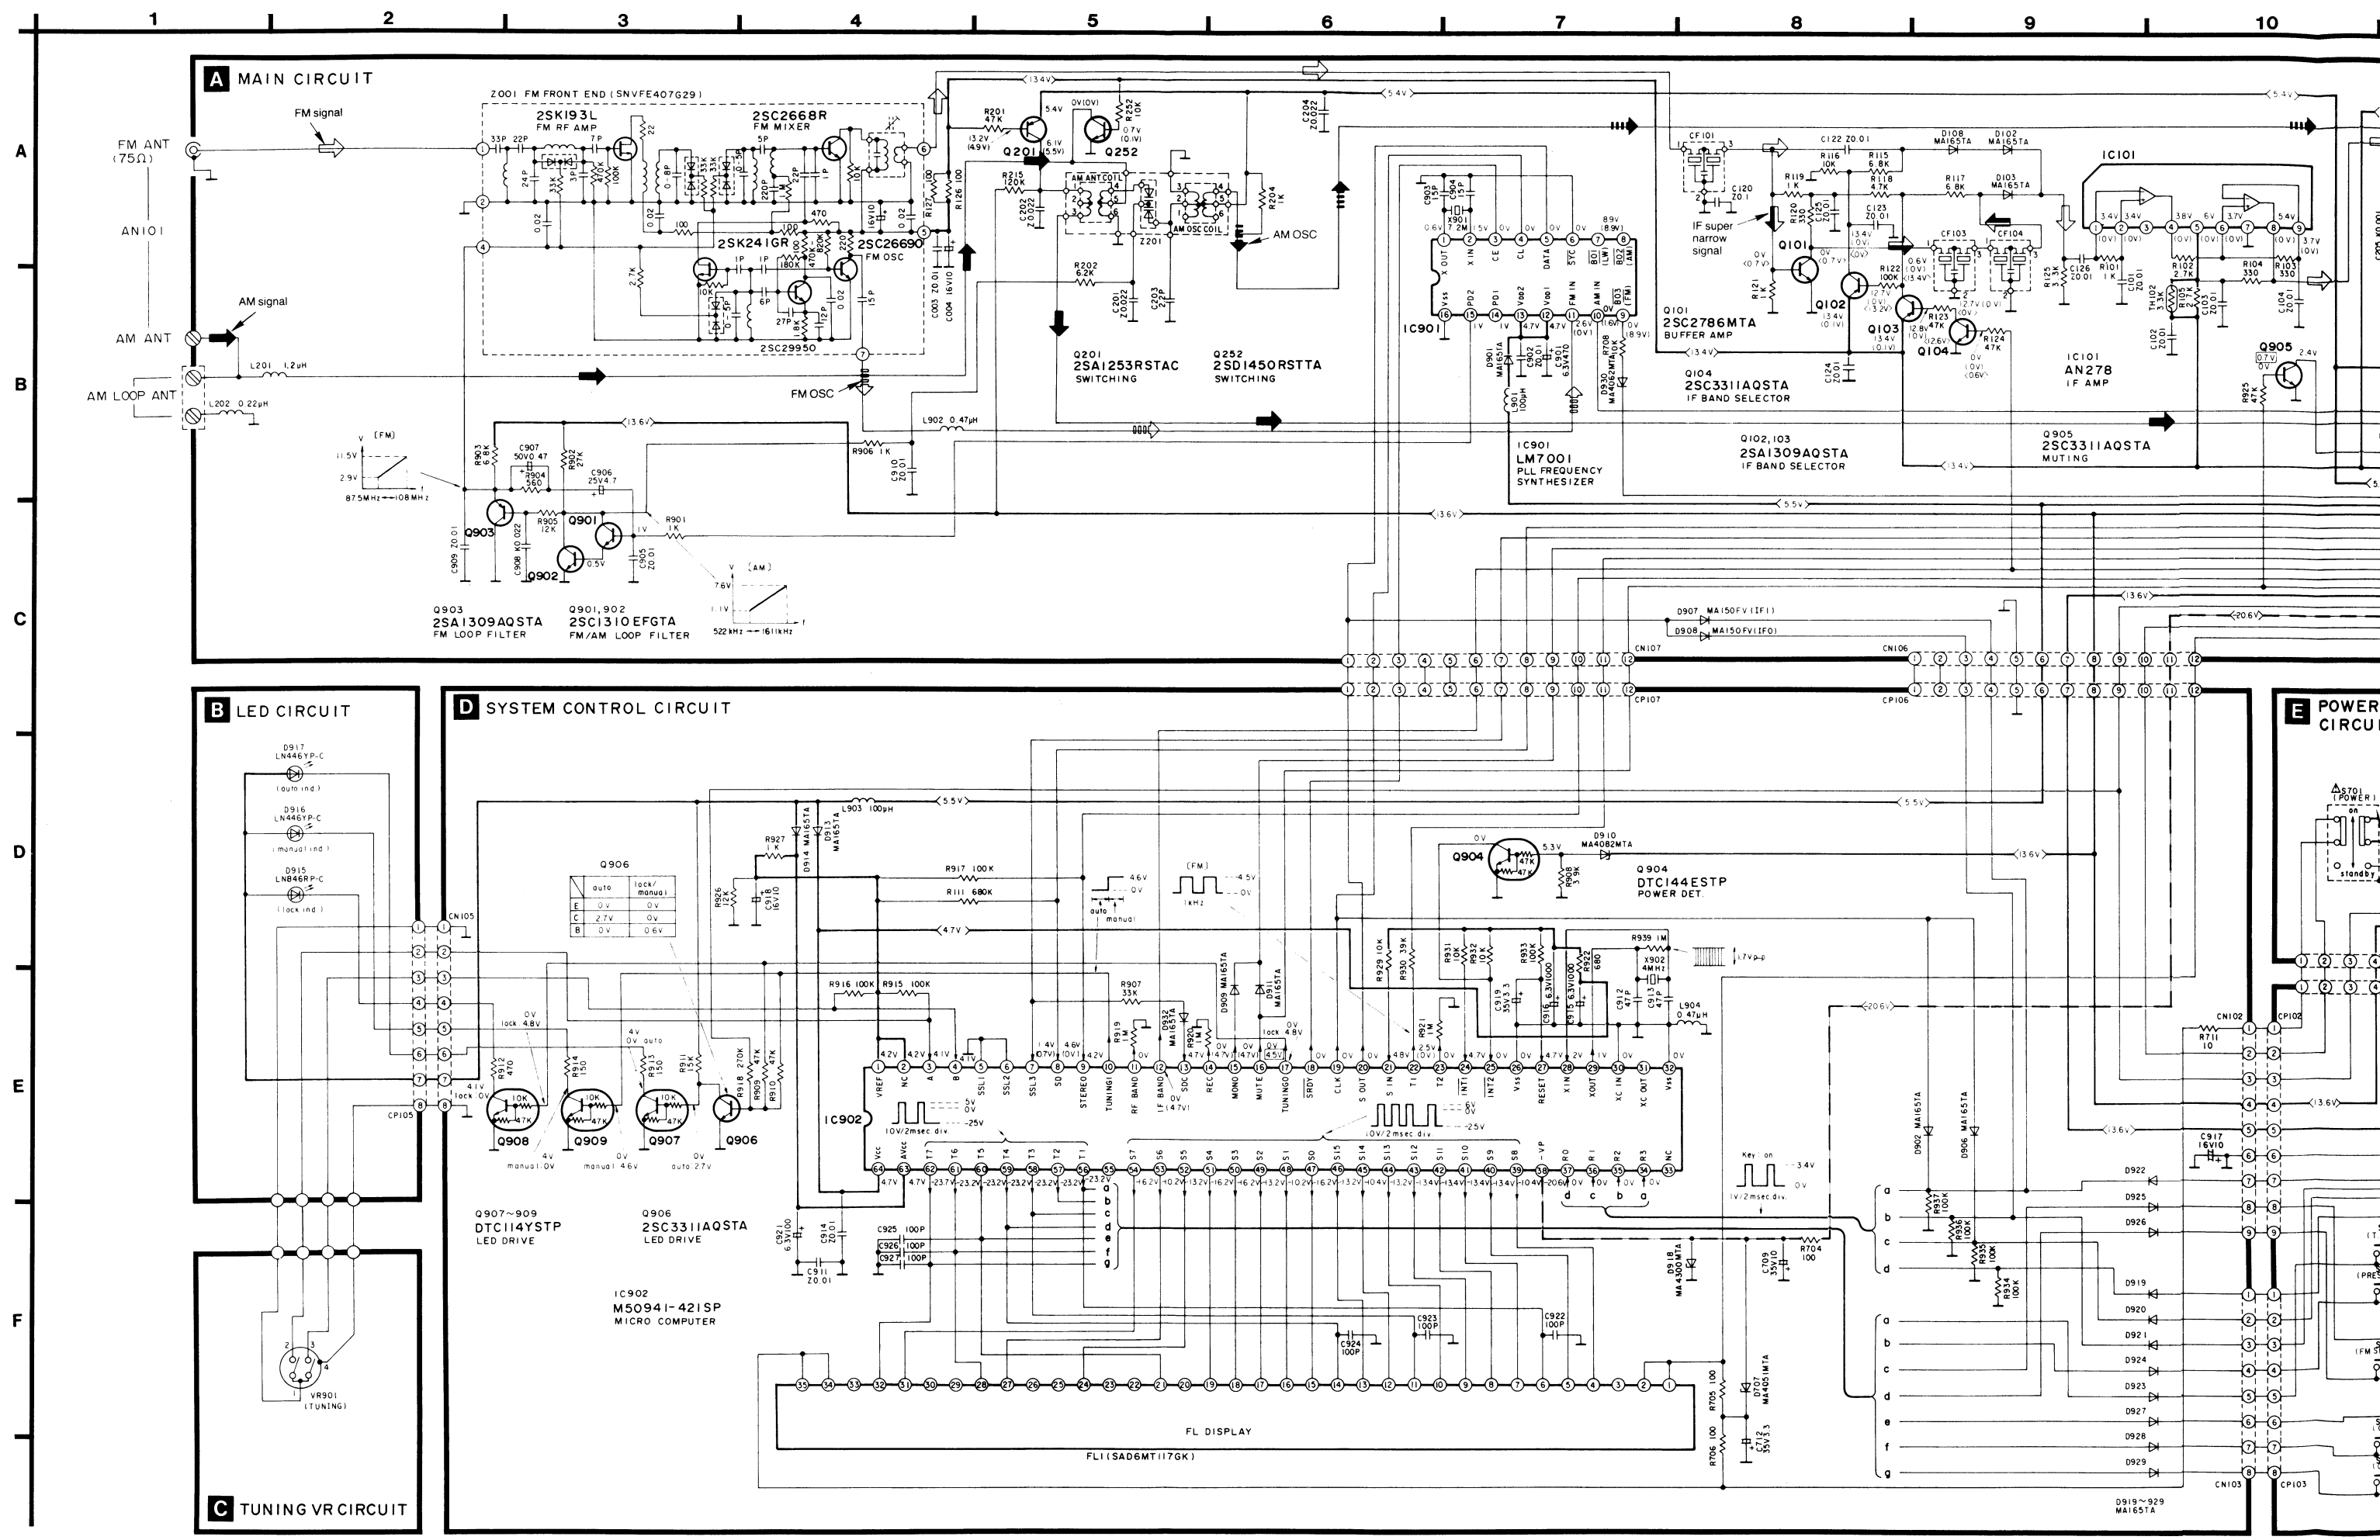

SCHEMATIC DIAGRAM (Parts list on page 18~20)

(This schematic diagram may be modified at any time with the development of new technology.)

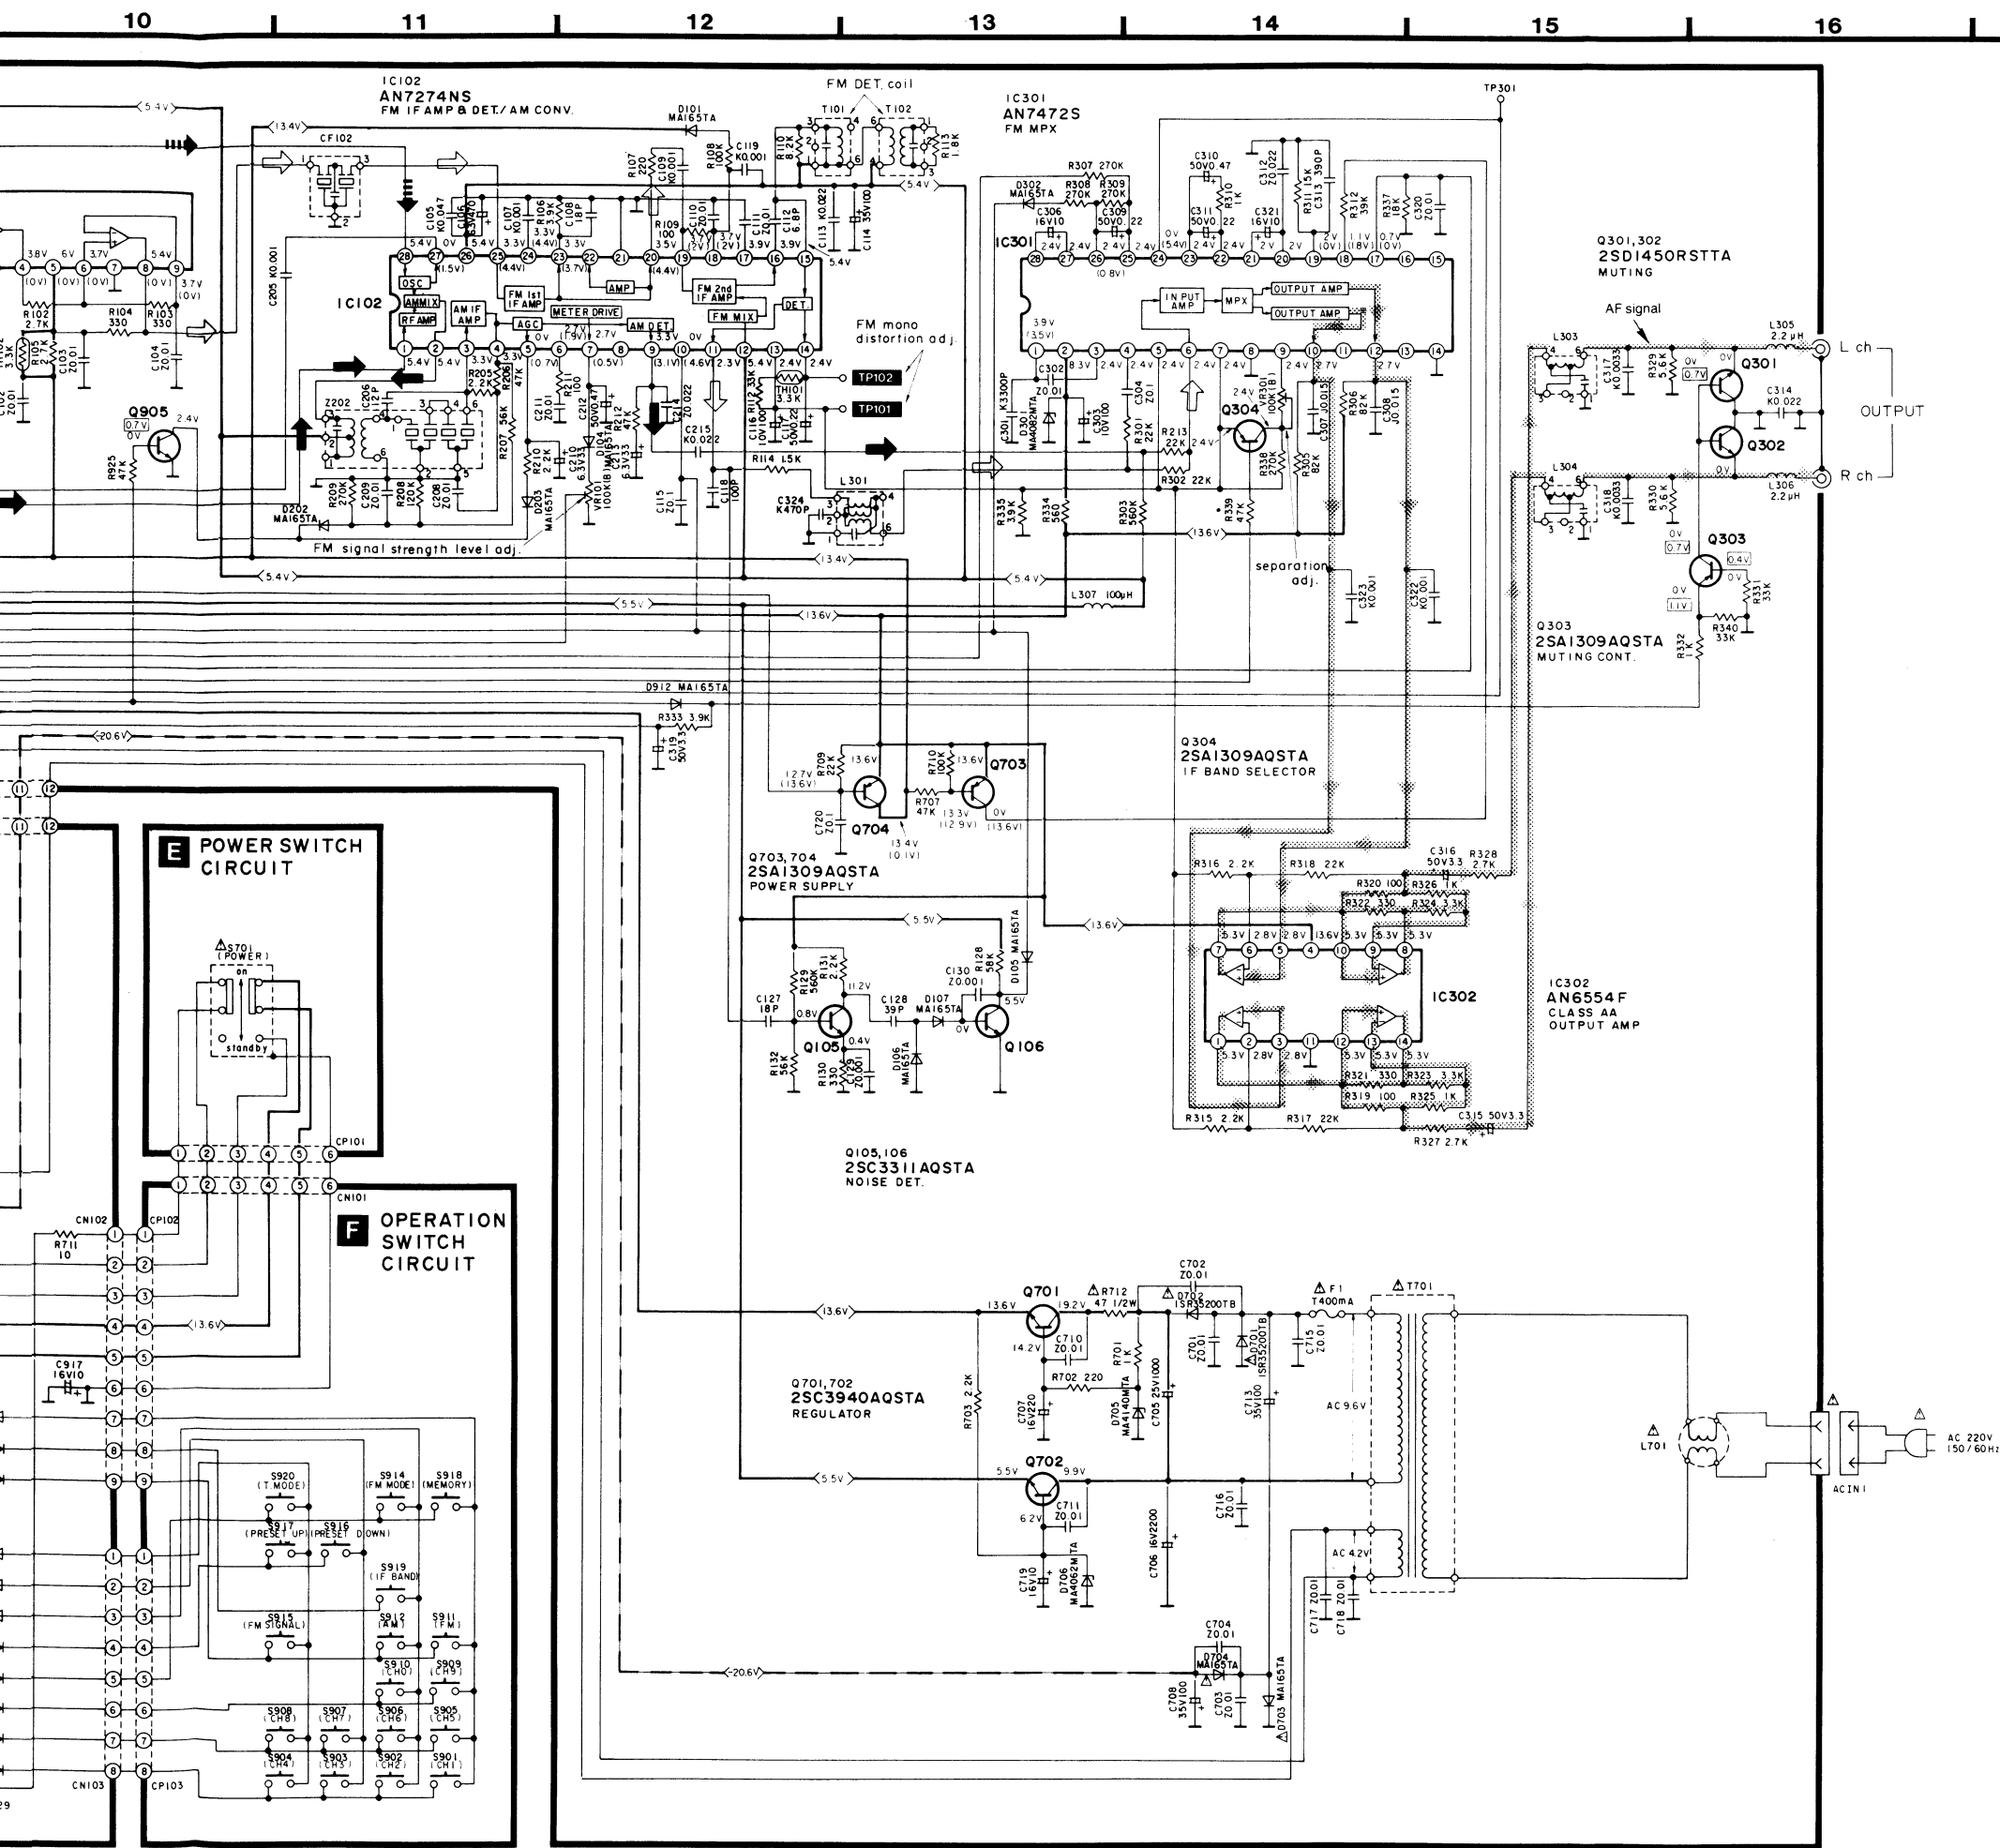

- Note 1:**
- S701: Power switch.
 - S901~S910: Preset tuning switches.
 - (S901: CH1, S902: CH2, S903: CH3, S904: CH4, S905: CH5, S906: CH6, S907: CH7, S908: CH8, S909: CH9, S910: CH0)
 - S911, S912: Band selector switches.
 - S911: FM, S912: MW
 - S914: FM mode selector switch.
 - S915: FM signal ON/OFF Switch.
 - S916, S917: Preset channel switches.
 - S916: DOWN, S917: UP
 - S918: Memory Switch.
 - S919: FM iF band switch.
 - S920: Tuning mode switch.

• Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester. (): AM voltage

- Positive voltage lines
- AF signal lines
- FM OSC
- AM OSC
- IF super narrow signal
- FM signal
- AM signal

• Important safety notice
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Note 2:

• Use of ceramic filters in pairs
The ceramic filters (CF101~CF104) for FM-IF circuit are available in three ranks. For this circuit, be sure to use the ceramics of the same rank in a pair. At repairing and replacement, pay close attention to the diodes (D907, D908) for use as different diodes must be used depending on each rank of the ceramic filters.

Color marking
(Red, Black or White)

RANK (Color)	D907	D908	CENTER FREQUENCY
Orange	○	○	10.72 MHz
Red	×	×	10.70 MHz
Blue	×	○	10.67 MHz

Note: ○ mark: Diode is used.
× mark: Diode is not used.





*** Caution!**
IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.
* Cover the parts boxes made of plastics with aluminum coil.
* Ground the soldering iron.
* Put a conductive mat on the work table.
* Do not touch the legs of IC or LSI with the fingers directly.

■ CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM



A
B
C
D
E
F

D SYSTEM CONTROL PC.B.


C TUNING VR PC.B. B LED PC.B.

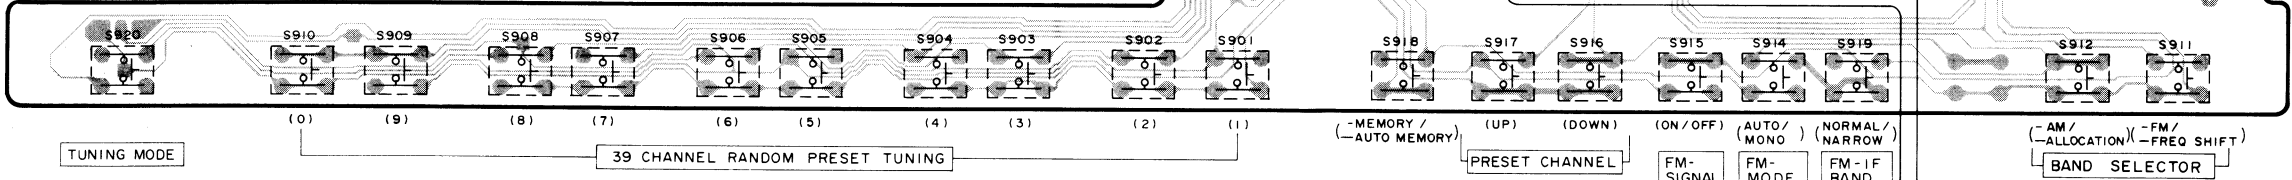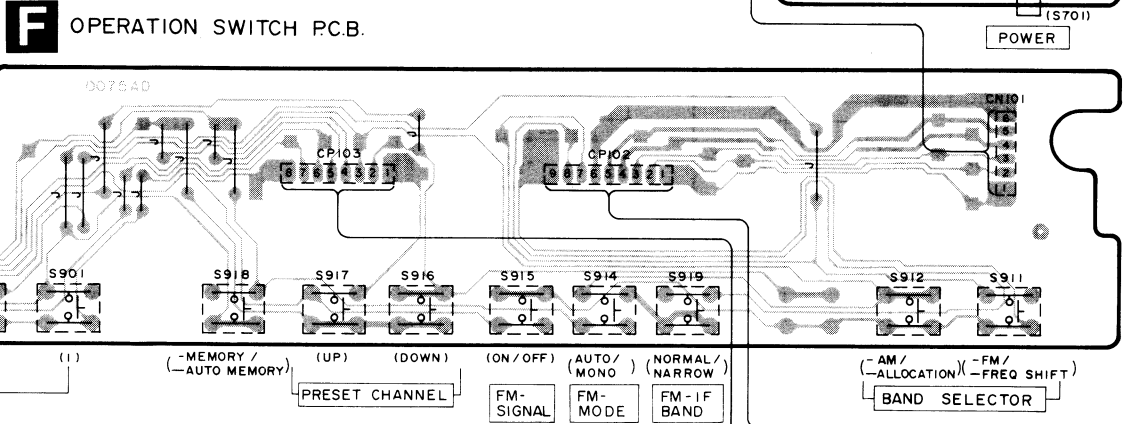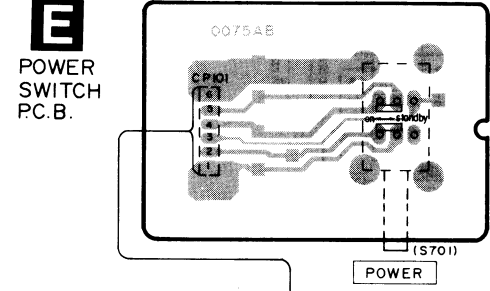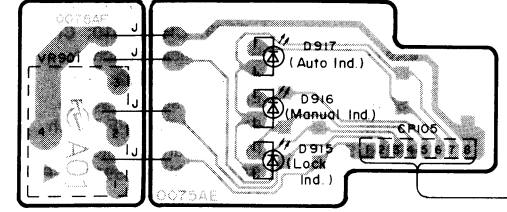





A MAIN PC.B.

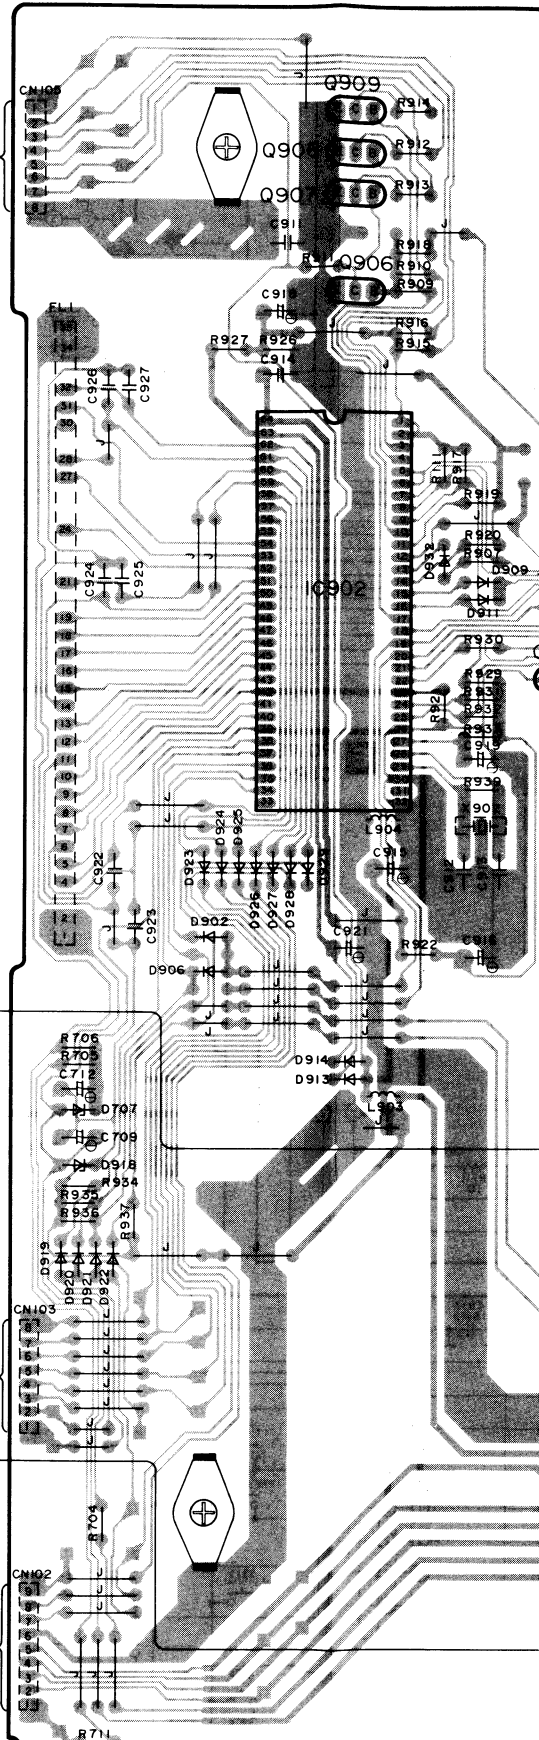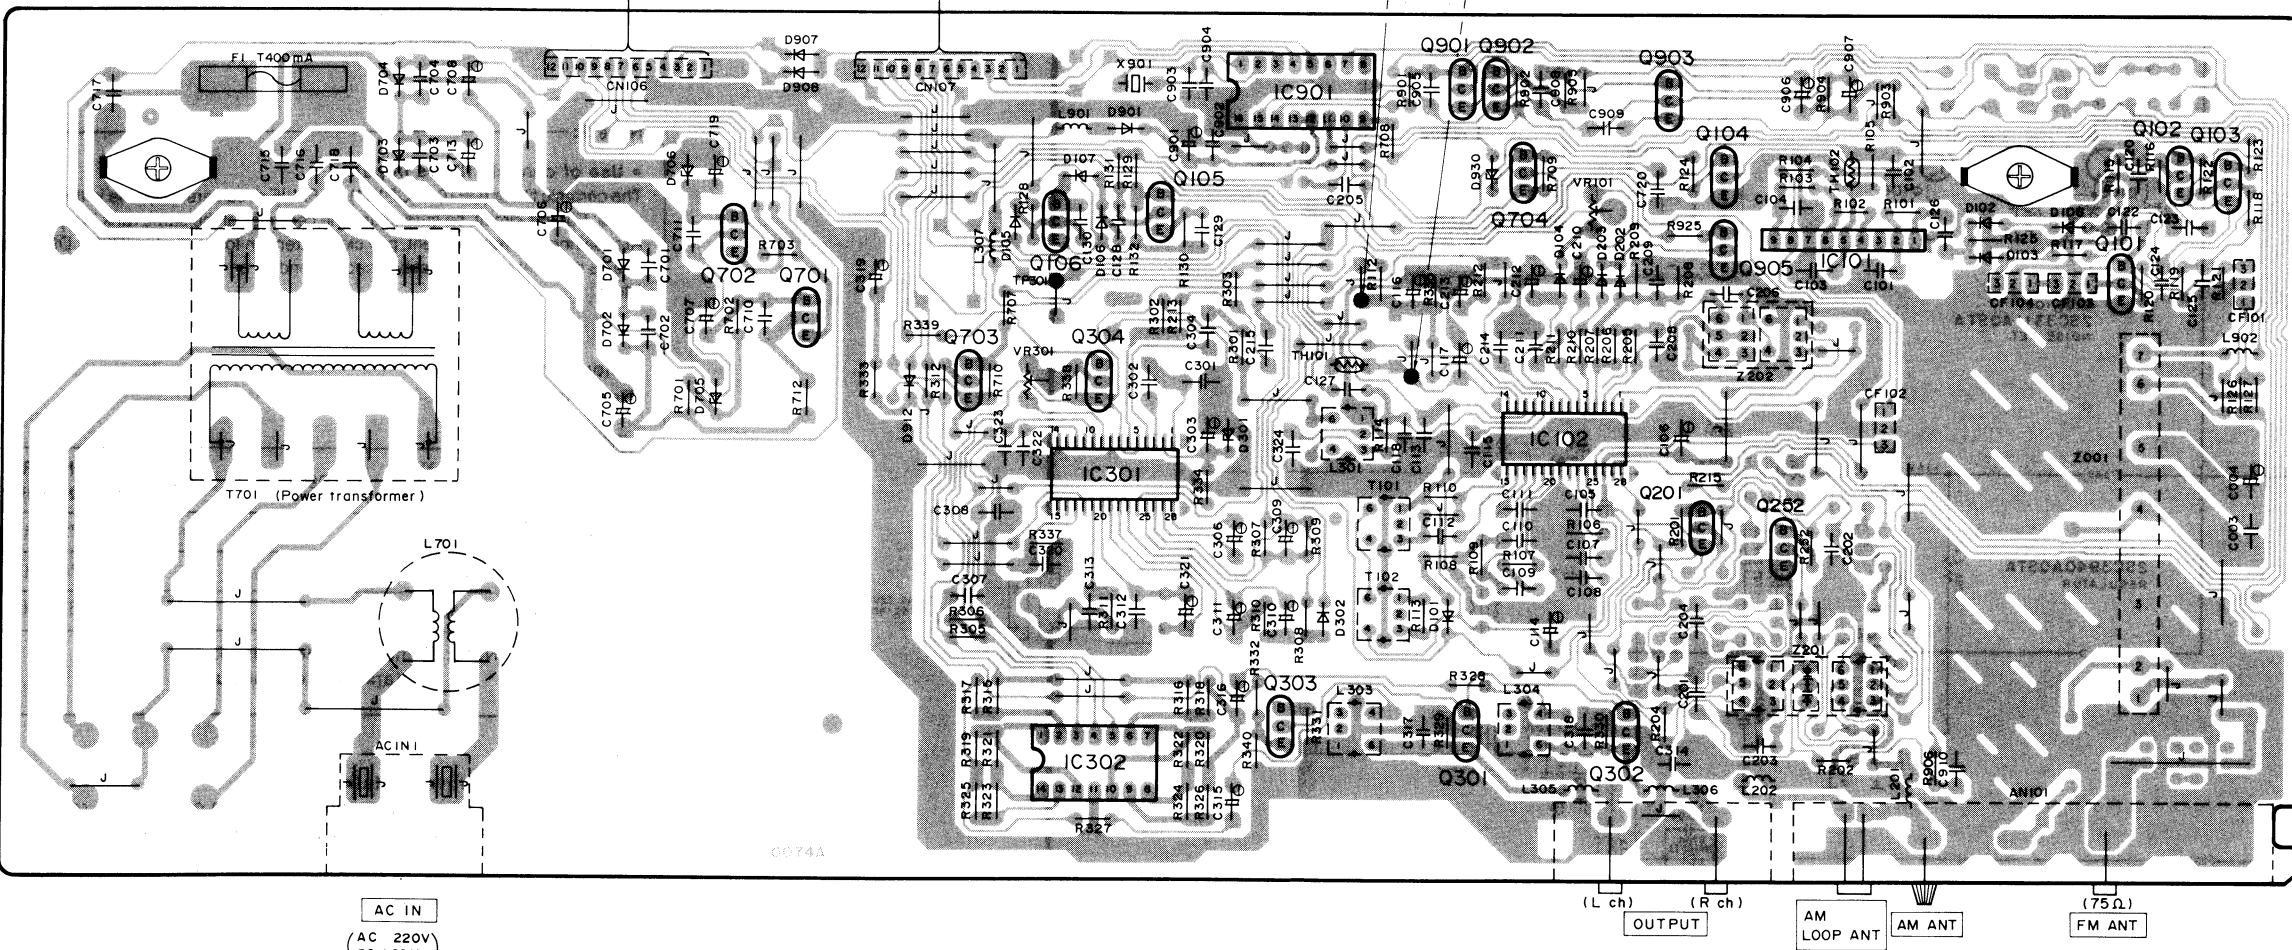

CONTROL P.C.B.

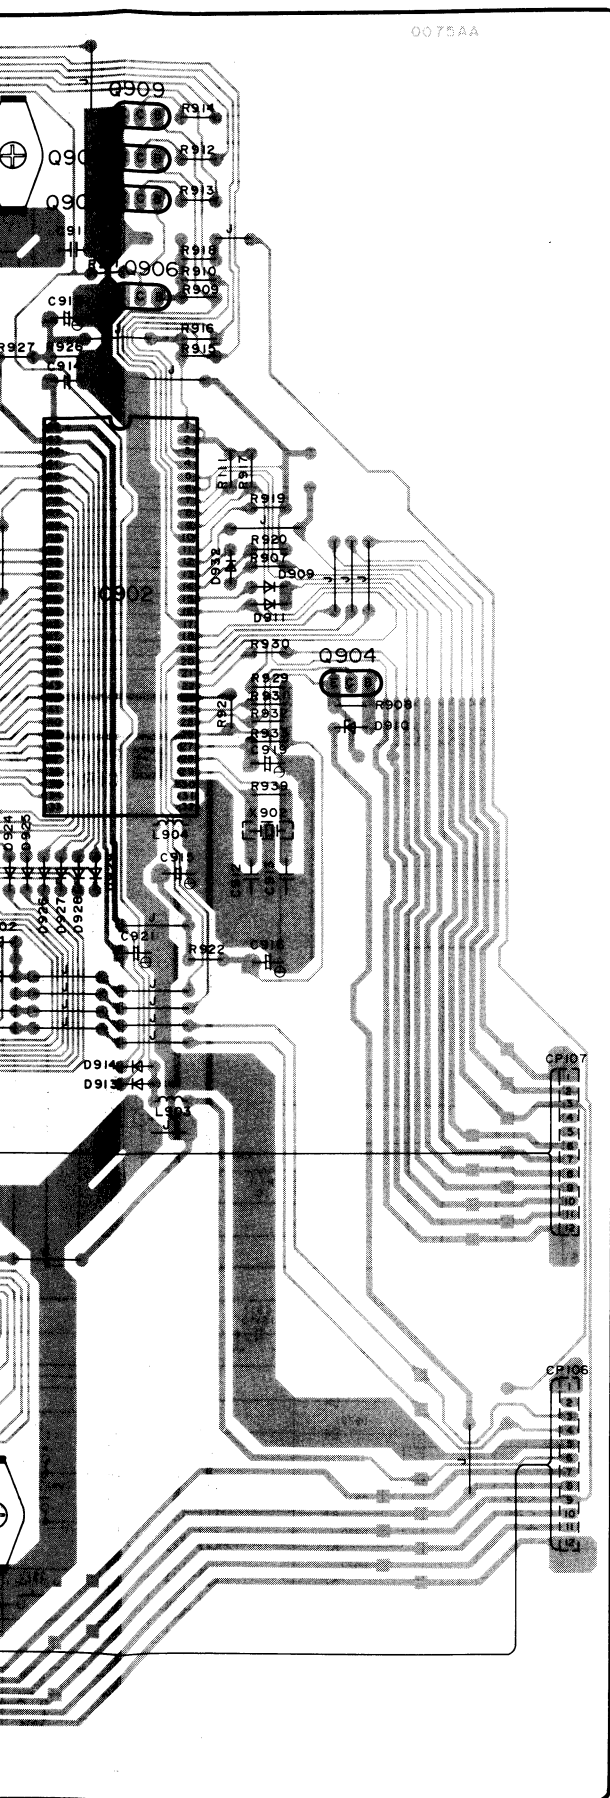

FUNCTIONS OF IC TERMINALS (IC902: M50941-421SP)

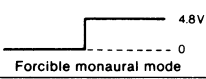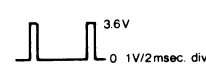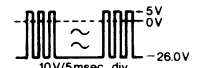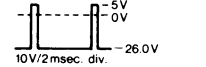PIN NO.	IN/OUT	MARK	DESCRIPTION OF TERMINAL
1	INPUT	VREF	Reference voltage terminal.
2	—	NC	Not used in this unit.
3	—	A	Not used in this unit, connected to GND.
4	—	B	
5	—	SSL1	Not used in this unit, connected to GND.
6	—	SSL2	
7	INPUT	SSL3	FM signal level detector terminal.
8	INPUT	SD	Station detection of auto tuning terminal. • Received: "H", No signal: "L"
9	INPUT	STEREO	Reference voltage terminal.
10	—	TUNING 0	Not used in this unit.
17	—	TUNING 1	
11	—	RF BAND	Not used in this unit.
12	OUTPUT	IF BAND	FM IF BAND selector terminal. • "normal": "L", "super narrow": "H"
13	—	NC	Not used in this unit.
14	—	REC	Not used in this unit.
15	OUTPUT	MONO	Forcible monaural selection terminal. 
16	OUTPUT	MUTE	Terminal to eliminate shock noise due to unlocking at PLL. (Muting output) • Pin 25 (CE) is "L" → "H" or "H" → "L" • Power switch "off". • Frequency change. (up/down, FM → AM (MW/LW), REC). • FM RF/IF selection.
18	OUTPUT	SRDY	PLL data output terminal. SRDY: serial I/O enable signal, CLK: clock signal, SOUT: serial data signal.
19		CLK	
20		SOUT	
21	INPUT	SIN	Control input terminal.
22	OUTPUT	T1	Clock pulse waveform output terminal. • FM: 1kHz signal (duty 50%)
23	—	T2	Not used in this unit.
24	INPUT	INT1	Remote control input terminal. Not used in this unit.
25	INPUT	INT2	Power supply detection terminal.
26	—	Vss	Ground terminal.
27	INPUT	RESET	Reset signal terminal.
28	INPUT	XIN	Connecting terminal for crystal oscillator.
29	OUTPUT	XOUT	Not used in this unit, connected to GND.
30	—	XCIN	
31	—	XCOUT	
33	—	NC	Not used in this unit.
34	INPUT	R0	Terminal for key return signal to external key matrix. 
37		R3	
38	INPUT	VP	Power supply terminal for FL display.
39	OUTPUT	S0	Segment signal terminal for FL display. 
54		S15	
55	—	NC	Not used in this unit.
56	OUTPUT	T1	Terminal for key scan signal to external key matrix and grid signal terminal for FL display. 
62		T7	
63	INPUT	AVcc	Power supply terminal of device.
64	INPUT	Vcc	Power supply terminal of device.

REPLACEMENT PARTS LIST

- Notes:
- Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 - The parenthesized indications in the Remarks columns specify the areas. (Refer to the first page for area.) Parts without these indications can be used for all areas.
 - "K" mark parts are used for black type only.
 - "S" mark parts are used for silver type only. Parts other than "K" and "S" marked are used for all color types.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUITS		D916, 917	LN446YP-C	DIODE	
				D918	MA4300MTA	DIODE	
				D919-929	MA165TA	DIODE	
				D930	MA4062MTA	DIODE	
				D932	MA165TA	DIODE	
						VARIABLE RESISTORS	
				VR101	EVNDXAA00B15	V. R. STRENGTH LEVEL ADJ.	
				VR301	EVNDXAA00B15	V. R. STEREO SEPARATION ADJ.	
				VR901	EVQMX922512B	V. R. TUNING CONTROL	
						THERMISTORS	
				TH101, 102	ERTD2ZHL332T	THERMISTOR	
						COMPONENT COMBINATIONS	
				Z001	SNVFE407G29	TUNER PACK	
				Z201	SLA221-T	COIL	
				Z202	RLI2Z002-W	COMPONENT COMBINATION	
						COILS	
				L201	ELEPK1R2MA	COIL	
				L202	ELEPKR22MA	COIL	
				L301	SLM1B10-M	COIL	
				L303, 304	SLM1B9-P	COIL	
				L305, 306	RLQZP2R2KT-Y	COIL	
				L307	RLQZP101KT-Y	COIL	
				L701	SLQZ650MH49	COIL	Δ
				L901	RLQZP101KT-Y	COIL	
				L902	RLQZPR47KT-Y	COIL	
				L903	RLQZP101KT-Y	COIL	
				L904	RLQZPR47KT-Y	COIL	
						FILTERS	
				CF101	SVFE107M22-A	CERAMIC FILTER (RED)	
				CF101	SVFE107M22-B	CERAMIC FILTER (BLUE)	
				CF101	SVFE107M22-C	CERAMIC FILTER (ORANGE)	
				CF102	SVFE107MX2-A	CERAMIC FILTER (RED)	
				CF102	SVFE107MX2-B	CERAMIC FILTER (BLUE)	
				CF102	SVFE107MX2-C	CERAMIC FILTER (ORANGE)	
				CF103	SVFE107M22-A	CERAMIC FILTER (RED)	
D101-108	MA165TA	DIODE					
D202, 203	MA165TA	DIODE					
D301	MA4082MTA	DIODE					
D302	MA165TA	DIODE					
D701, 702	1SR35200TB	DIODE	Δ				
D703, 704	MA165TA	DIODE	Δ				
D705	MA4140MTA	DIODE					
D706	MA4062MTA	DIODE					
D707	MA4051MTA	DIODE					
D901, 902	MA165TA	DIODE					
D906	MA165TA	DIODE					
D907, 908	MA150FV	DIODE					
D909	MA165TA	DIODE					
D910	MA4082MTA	DIODE					
D911-914	MA165TA	DIODE					
D915	LN846RP-C	DIODE					

Ref.No.	Part No.	Part Name & Description	Remarks	Ref.No.	Part No.	Part Name & Description	Remarks
CF103	SVFE107MZ2-B	CERAMIC FILTER (BLUE)				JACKS	
CF103	SVFE107MZ2-C	CERAMIC FILTER (ORANGE)					
CF104	SVFE107MZ2-A	CERAMIC FILTER (RED)		ACIN1	SJS9236	AC INLET	△
CF104	SVFE107MZ2-B	CERAMIC FILTER (BLUE)		AN101	SJF8305N	ANT TERMINAL	
CF104	SVFE107MZ2-C	CERAMIC FILTER (ORANGE)		CN101	SJS50681BB	CONNECTOR (6P)	
		TRANSFORMERS		CN102	RJU003K009M	CONNECTOR (9P)	
T101	RL14B005-Z	TRANSFORMER		CN103	RJU003K008M	CONNECTOR (8P)	
T102	RL14B006-Z	TRANSFORMER		CN105	RJU003K008M	CONNECTOR (8P)	
T701	SLT5K264-K	POWER TRANSFORMER	△	CN106, 107	RJU005W012	CONNECTOR (12P)	
		OSCILLATORS		CP101	SJT30648BB	CONNECTOR (6P)	
X901	SVQ49U722T-S	OSCILLATOR		CP102	RJT003K009M	CONNECTOR (9P)	
X902	SVQ49U402T-S	OSCILLATOR		CP103	RJT003K008M	CONNECTOR (8P)	
		SWITCHES		CP105	RJT003K008M	CONNECTOR (8P)	
S701	SSH1218	SW, POWER	△	CP106, 107	RJT005W012	CONNECTOR (12P)	
S901-912	EVQB005R	SW,				FUSE	
S914-920	EVQB005R	SW,		F1	XBA2C04TB0	FUSE 250V T0.4A	△
						DISPLAY	
				FL1	SAD6WT117GK	DISPLAY TUBE	

Notes : * Capacity value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
 * Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k (OHM)

Ref.No.	Part No.	Values & Remarks	Ref.No.	Part No.	Values & Remarks	Ref.No.	Part No.	Values & Remarks
		RESISTORS	R129	ERDS2TJ564T	1/4W 560K	R319, 320	ERDS2TJ101T	1/4W 100
			R130	ERDS2TJ331T	1/4W 330	R321, 322	ERDS2TJ331T	1/4W 330
			R131	ERDS2TJ222T	1/4W 2.2K	R323, 324	ERDS2TJ332T	1/4W 3.3K
R101	ERDS2TJ102T	1/4W 1K	R132	ERDS2TJ563T	1/4W 56K	R325, 326	ERDS2TJ102T	1/4W 1K
R102	ERDS2TJ272T	1/4W 2.7K	R201	ERDS2TJ473T	1/4W 47K	R327, 328	ERDS2TJ272T	1/4W 2.7K
R103, 104	ERDS2TJ331T	1/4W 330	R202	ERDS2TJ822T	1/4W 8.2K	R329, 330	ERDS2TJ562T	1/4W 5.6K
R105	ERDS2TJ272T	1/4W 2.7K	R203	ERDS2TJ104T	1/4W 100K	R331	ERDS2TJ333T	1/4W 33K
R106	ERDS2TJ392T	1/4W 3.9K	R204	ERDS2TJ102T	1/4W 1K	R332	ERDS2TJ102T	1/4W 1K
R107	ERDS2TJ221T	1/4W 220	R205	ERDS2TJ222T	1/4W 2.2K	R333	ERDS2TJ392T	1/4W 3.9K
R108	ERDS2TJ104T	1/4W 100K	R206	ERDS2TJ473T	1/4W 47K	R334	ERDS2TJ561T	1/4W 560
R109	ERDS2TJ101T	1/4W 100	R207	ERDS2TJ563T	1/4W 56K	R335	ERDS2TJ392T	1/4W 3.9K
R110	ERDS2TJ822T	1/4W 8.2K	R208	ERDS2TJ124T	1/4W 120K	R337	ERDS2TJ183T	1/4W 18K
R111	ERDS2TJ684T	1/4W 680K	R209	ERDS2TJ274T	1/4W 270K	R338	ERDS2TJ274T	1/4W 270K
R112	ERDS2TJ333T	1/4W 33K	R210	ERDS2TJ222T	1/4W 2.2K	R339	ERDS2TJ473T	1/4W 47K
R113	ERDS2TJ182T	1/4W 1.8K	R211	ERDS2TJ101T	1/4W 100	R340	ERDS2TJ333T	1/4W 33K
R114	ERDS2TJ152T	1/4W 1.5K	R212	ERDS2TJ473T	1/4W 47K	R701	ERDS2TJ102T	1/4W 1K
R115	ERDS2TJ682T	1/4W 6.8K	R213	ERDS2TJ223T	1/4W 22K	R702	ERDS2TJ221T	1/4W 220
R116	ERDS2TJ103T	1/4W 10K	R215	ERDS2TJ124T	1/4W 120K	R703	ERDS2TJ222T	1/4W 2.2K
R117	ERDS2TJ682T	1/4W 6.8K	R252	ERDS2TJ103T	1/4W 10K	R704-706	ERDS2TJ101T	1/4W 100
R118	ERDS2TJ472T	1/4W 4.7K	R301, 302	ERDS2TJ223T	1/4W 22K	R707	ERDS2TJ473T	1/4W 47K
R119	ERDS2TJ102T	1/4W 1K	R303	ERDS2TJ564T	1/4W 560K	R708	ERDS2TJ103T	1/4W 10K
R120	ERDS2TJ331T	1/4W 330	R305, 306	ERDS2TJ823T	1/4W 82K	R709	ERDS2TJ223T	1/4W 22K
R121	ERDS2TJ102T	1/4W 1K	R307-309	ERDS2TJ274T	1/4W 270K	R710	ERDS2TJ104T	1/4W 100K
R122	ERDS2TJ104T	1/4W 100K	R310	ERDS2TJ102T	1/4W 1K	R711	ERDS2TJ100T	1/4W 10
R123, 124	ERDS2TJ473T	1/4W 47K	R311	ERDS2TKF1502	1/4W 15K	R712	ERDS1FVJ470T	1/2W 47 △
R125	ERDS2TJ332T	1/4W 3.3K	R312	ERDS2TJ393T	1/4W 39K	R901	ERDS2TJ102T	1/4W 1K
R126, 127	ERDS2TJ101T	1/4W 100	R315, 316	ERDS2TJ222T	1/4W 2.2K	R902	ERDS2TJ273T	1/4W 27K
R128	ERDS2TJ563T	1/4W 56K	R317, 318	ERDS2TJ223T	1/4W 22K	R903	ERDS2TJ682T	1/4W 6.8K

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R904	ERDS2TJ561T	1/4W 560	C210	ECEAJK330B	6.3V 33U	C922-927	RCBS1H101KBY	50V 100P
R905	ERDS2TJ123T	1/4W 12K	C211	ECKT1H103ZF	50V 0.01U			
R906	ERDS2TJ102T	1/4W 1K	C212	ECEAJHR47B	50V 0.47U			
R907	ERDS2TJ333T	1/4W 33K	C213	ECEAJK330B	6.3V 33U			
R908	ERDS2TJ392T	1/4W 3.9K	C214	ECKT1H223ZF	50V 0.022U			
R909, 910	ERDS2TJ473T	1/4W 47K	C215	ECFTD223KXL	25V 0.022U			
R911	ERDS2TJ153T	1/4W 15K	C301	ECFTD332KXL	25V 3300P			
R912	ERDS2TJ471T	1/4W 470	C302	ECKT1H103ZF	50V 0.01U			
R913, 914	ERDS2TJ151T	1/4W 150	C303	ECEAJU101B	10V 100U			
R915-917	ERDS2TJ104T	1/4W 100K	C304	ECFR1E104ZFY	25V 0.1U			
R918	ERDS2TJ274T	1/4W 270K	C306	ECEAJCK100B	16V 10U			
R919-921	ERDS2TJ105T	1/4W 1M	C307, 308	ECQB1H153JZ3	50V 0.015U			
R922	ERDS2TJ681T	1/4W 680	C309	ECEAJHR22B	50V 0.22U			
R925	ERDS2TJ473T	1/4W 47K	C310	ECEAJHR47B	50V 0.47U			
R926	ERDS2TJ123T	1/4W 12K	C311	ECEAJHR22B	50V 0.22U			
R927	ERDS2TJ102T	1/4W 1K	C312	ECKT1H223ZF	50V 0.022U			
R929	ERDS2TJ103T	1/4W 10K	C313	ECQP2A391GZT	100V 390P			
R930	ERDS2TJ393T	1/4W 39K	C314	ECQM1H223KV3	50V 0.022U			
R931, 932	ERDS2TJ103T	1/4W 10K	C315, 316	ECEAJHPX3R3B	50V 3.3U			
R933-937	ERDS2TJ104T	1/4W 100K	C317, 318	ECFTD332KXL	25V 3300P			
R939	ERDS2TJ105T	1/4W 1M	C319	ECEAJHPX3R3B	50V 3.3U			
			C320	ECKT1H103ZF	50V 0.01U			
		CAPACITORS	C321	ECEAJCK100B	16V 10U			
			C322, 323	ECBT1H102KB5	50V 0.001U			
C003	ECKT1H103ZF	50V 0.01U	C324	ECKT1H471KB	50V 470P			
C004	ECEAJCK100B	16V 10U	C701-704	ECKT1H103ZF	50V 0.01U			
C101-104	ECKT1H103ZF	50V 0.01U	C705	ECEAJEU102E	25V 1000U			
C105	ECQM1H473KV3	50V 0.047U	C706	ECEAJCU222E	16V 2200U			
C106	ECEAJU471B	6.3V 470U	C707	ECEAJCU221B	16V 220U			
C107	ECQM1H102KV3	50V 1000P	C708	ECEAJU101B	35V 100U			
C108	RCBS1H180JCY	50V 18P	C709	ECEAJVK100B	35V 10U			
C109	ECBT1H102KB5	50V 0.001U	C710, 711	ECKT1H103ZF	50V 0.01U			
C110, 111	ECKT1H103ZF	50V 0.01U	C712	ECEAJVK3R3B	35V 3.3U			
C112	RCBS1H6R8KCY	50V 6.8P	C713	ECEAJU101B	35V 100U			
C113	ECQM1H223KV3	50V 0.022U	C714	ECEAJCK100B	16V 10U			
C114	ECEAJU101B	35V 100U	C715-718	ECKT1H103ZF	50V 0.01U			
C115	ECFR1E104ZFY	25V 0.1U	C719	ECEAJCK100B	16V 10U			
C116	ECEAJU101B	10V 100U	C720	ECFR1E104ZFY	25V 0.1U			
C117	ECEAJHR22B	50V 0.22U	C901	ECEAJU471B	6.3V 470U			
C118	RCBS1H101KBY	50V 100P	C902	ECBT1E103ZF5	25V 0.01U			
C119	ECBT1H102KB5	50V 0.001U	C903, 904	RCBS1H150JCY	50V 15P			
C120	ECFR1E104ZFY	25V 0.1U	C905	ECKT1H103ZF	50V 0.01U			
C122-126	ECKT1H103ZF	50V 0.01U	C906	ECEAJ25M4R7RB	25V 4.7U			
C127	RCBS1H180JCY	50V 18P	C907	ECEAJHR47B	50V 0.47U			
C128	RCBS1H390JLY	50V 39P	C908	ECFTD223KXL	25V 0.022U			
C129, 130	ECBT1H102KB5	50V 0.001U	C909-911	ECKT1H103ZF	50V 0.01U			
C201, 202	ECKT1H223ZF	50V 0.022U	C912, 913	RCBS1H470JLY	50V 47P			
C203	RCBS1H2R2JCY	50V 2.2P	C914	ECKT1H103ZF	50V 0.01U			
C204	ECKT1H223ZF	50V 0.022U	C915, 916	ECEAJU102B	6.3V 1000U			
C205	ECBT1H102KB5	50V 0.001U	C917, 918	ECEAJCK100B	16V 10U			
C206	RCBS1H120JCY	50V 12P	C919	ECEAJVK3R3B	35V 3.3U			
C208, 209	ECKT1H103ZF	50V 0.01U	C921	ECEAJU101B	6.3V 100U			

Ref.No.	Part No.	Part Name & Description	Remarks
		CABINET PARTS	
1	RKMD032-K	CABINET	K
1	RKMD032-S	CABINET	S
2	SNE2129-1	SCREW	K
2	SNE2129	SCREW	S
3	RGR0018A-A	REAR PANEL	(EG)
3	RGR0057	REAR PANEL	(EI)
4	RGU0030	POWER BUTTON	K
4	RGU0030-S	POWER BUTTON	S
5	RGW0024-K	TUNING KNOB	K
5	RGW0024-S	TUNING KNOB	S
5-1	XXE4DSFZS	SCREW	
7	RMA0074	HOLDER	
8	RXK0045	CHASSIS	
8-1	RKA0009-1	FOOT	
8-2	XTB3+6J	SCREW	
9	SHE187-2	HOLDER	
10	SNE4021	NUT	
11	XTBS3+8JFZ1	SCREW	
12	XTB3+20JFZ	SCREW	
13	XTB3+8JFZ	SCREW	
15	RGK0089-K	ORNAMENT	K
15	RGK0089-S	ORNAMENT	S
16	RGK0090A-K	GRILL	K
16	RGK0090A-S	GRILL	S
16-1	RKW0030	PANEL	
17	RGU0111-K	FUNCTION BUTTON	K
17	RGU0111-S	FUNCTION BUTTON	S

Ref.No.	Part No.	Part Name & Description	Remarks
18	RGU0112-K	PRESET BUTTON	K
18	RGU0112-S	PRESET BUTTON	S
19	RGU0113-K	MODE BUTTON	K
19	RGU0113-S	MODE BUTTON	S
20	RJH3201N	TERMINAL BOARD	
21	SJT390	FUSE HOLDER	△
22	RMP0128	FL HOLDER	
23	RYP0123-K	FRONT PANEL	K
23	RYP0124-S	FRONT PANEL	S
		PACKING MATERIAL	
P1	RPG0143	CARTON BOX	K
P1	RPG0154	CARTON BOX	S
P2	SPSD152	ACCESSORY BOX	
P3	RPND124	PAD	
P4	XZB60X60A01	PROTECTION COVER	
		ACCESSORIES	
A1	RQFD149	INSTRUCTIONS MANUAL	(EG)
A1	RQFD150	INSTRUCTIONS MANUAL	(EI)
A2	SFDAC05E03	AC CORD	△
A3	SJP2276	CORD	
A4	SPB1162T	AM LOOP ANTENNA	
A5	SMA233-1M	HOLDER	
A6	SMA231M	HOLDER	
A7	XTB3+10AFZ	SCREW	
A8	SSA270M	FM ANTENNA	

ST-G560

EXPLODED VIEW

